




Only use appliance after
first reading these instructions!



Operating instructions
Washing machine

topLine pro 9240

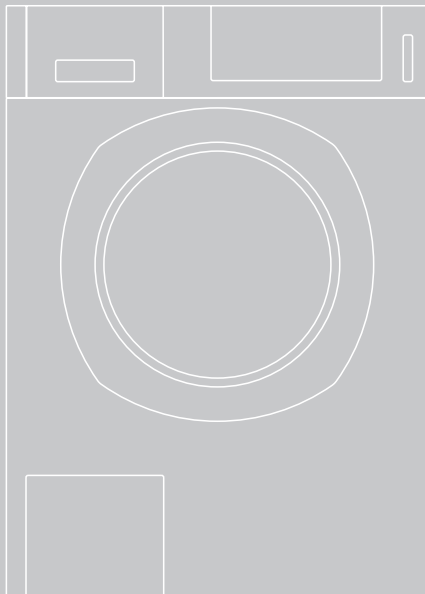

Symbols



Please read the instructions.



Warnings are marked with a warning triangle.

The text gives information how a dangerous situation can be avoided.

Signal words indicate the severity of the danger, if not avoided.



Warning

means that possible personal injuries, and potentially life-threatening injuries may occur.



Important

means property damages may occur.

Dear Customer

We are pleased that you have chosen a Schulthess washing machine.

Your new washing machine is the result of many years of development work. The highest quality requirements, both in development and manufacture, guarantee a long lifetime.

Its design meets all the demands of modern laundry care and offers you a varied and individual choice of programmes.

With its extremely efficient use of water, energy and detergent, it helps to reduce the pollution of our environment and ensures you the maximum possible efficiency in the operation of your washing machine.

Please read these instructions carefully to enable you to use all the possibilities and advantages of your new washing machine. Please note in particular the safety informations.

We hope you will be very happy with your new Schulthess machine.

**Your
Schulthess Maschinen AG**

Content

Safety and safety measures	6
Disposal	10
Washing tips	11
Detergent	11
Environmentally compatible washing	14
Washing tips	14
Stain removal	15
Dyeing textiles in the washing machine	15
Machine description	16
Detergent drawer	18
USB interface and dosing pumps	19
First-time use	20
First wash cycle (without laundry)	20
Washing	21
Preparing the appliance	21
Selecting and starting the wash programme	21
Starting the programme	22
Skipping to the next programme step	22
Adding more laundry	23
Interrupting the programme	23
Cancelling the programme	23
Ending programme with rinsing stop	24
Programme end	24
Programme survey	26
Programmes main menu	26
Sportswear, outdoor	28
Homecare	29
Businesswear	30
Antibac	31
Disinfection	32
Wetclean	33
Facility cleaner Proficlean	34
Retirement homes Proficlean	36
Commercial company Proficlean	38
Gastronomy Proficlean	40
Wellness center Proficlean	41
Campsites, laundries Proficlean	42
Hospitals, clinics Proficlean	44

Special programmes	46
Sportswear	46
Homecare	47
Businesswear	47
Antibac	47
Favourites	47
Disinfection	47
Wetclean	48
Proficlean	48
Programme options	49
Express	49
Prewash	49
Intensive	49
Rinse +	49
Water +	49
Temperature	50
Spin speed	50
Rinsing stop	50
Half load	50
Soaking	51
Time preset	51
Settings	53
Language (temporarily)	53
Menu Settings	54
More settings	55
Cash-Card / Prepaid Card	60
Cleaning and maintenance	61
Hygiene function	61
Cleaning the machine	61
Check water supply hose	62
Frost protection	62
Cleaning the detergent drawer	62
Emergency emptying	63
Cleaning the filters in the water inlet	65
Problems	66
Technical specifications	76
Customer service	76
Warranty	76

Safety and safety measures



The enclosed documents contain important information on the installation, use and safety of the washing machine.

Keep the documents safe for other users or subsequent owners.

- ▶ Read the instructions carefully before operating the machine.
- ▶ Keep the instructions near the machine for further reference.
- ▶ Operating and setup instructions must be accessible for persons who operate the machine. It must be ensured that these people read and understand the instructions.

This machine meets the stringent safety regulations for electronic devices.

- ▶ Please observe the safety instructions in the operating and installation instructions.

Use in accordance with the intended purpose

The washing machine is suitable exclusively for the washing of all textiles intended for this treatment according to their care label. No liability can be assumed for oper-

ation for a purpose other than the one originally intended or improper operation.

The machine is intended solely for use in commercial and public premises.

The machine may be operated by children 8 years or older and adults with impaired physical, sensory or mental capabilities or lack of experience and knowledge, if they are supervised or have been instructed regarding the safe use of the machine and understand the dangers resulting from the use of the machine.

Do not let children play with the machine. Do not let children carry out cleaning and user maintenance without supervision.

Safety while handling and operating

Warning

Danger of electric shock!

- ▶ Do not connect an appliance which displays visible damage.
- ▶ Only touch the main switch with dry hands.
- ▶ Only pull the plug, do not pull the cable.
- ▶ Under no circumstances spray the machine with water or clean it with a steam cleaner.

Repair work may only be executed by qualified and trained personnel and defective components may only be replaced with original spare parts by the original equipment manufacturer.

Inexpert repairs or non-original parts can cause considerable property damage and risk to the user. Modifications to the appliance are only admissible after consultation with the manufacturer.

- ▶ If the mains supply is damaged, replace it with the corresponding replacement line (available from manufacturer or customer service).
- ▶ Always unplug the machine from the power source before carrying out maintenance work.
- ▶ If the machine is not needed for a longer period of time, disconnect it from the power supply.

Warning

Risk of injury!

Climbing onto the machine may cause it to tip and cause injuries.

- ▶ Never climb onto the appliance.
- ▶ Do not sit, lean or support yourself on the loading door.

Reaching into the turning drum may cause injury to hands.

- ▶ Do not reach into the rotating drum.
- ▶ Wait until the drum stops turning.

Contact with the hot suds during wash cycles with hot water may cause burns.

- ▶ Check before washing that the pump cover is inserted and fastened securely.
- ▶ Never loosen the pump cover during an active wash programme.

After interrupting a wash programme, the laundry may still be very hot.

- ▶ Let the laundry cool before removing it.

Components sticking out from the machine (e.g. loading door) may break off and cause injuries, when used for lifting.

- ▶ Do not grip the appliance on components sticking out.

If a puddle forms on the floor near the appliance (hose tear, leak, etc.), wipe it dry and eliminate the cause (see **Problems**).

Warning

Risk of fire!

Explosive substances may be formed through improper use of laundry starch and washing textiles containing solvents.

- ▶ Under no circumstances use any solvent-based detergents in the washing machine.

- ▶ Textiles which contain inflammable chemicals, solvent-based detergents, must be rinsed well in clear water by hand before washing.
- ▶ Only add laundry starch in the final rinse (Finishing rinse).
- ▶ Only use detergents, washing agents and other additives (softeners, colouring and bleaching agents, starch etc), which are intended for use in household washing machines (see manufacturer's information).

Safety for children

Warning

Risk of injury!

Children are in danger of injury or life-threatening situations, when playing with the machine.

- ▶ Keep children under 3 years of age away from the machine, when not closely supervised.
- ▶ Never permit children to play in, on or near the washing machine.

Children may lock themselves in the machine – this is a life-threatening situation.

Ensure that an old appliance can no longer be used:

- ▶ Disconnect the mains cable.
- ▶ Cut through the mains cable and remove cable and plug.
- ▶ Destroy or remove the door lock.

When playing with packaging material / film and packaging parts, children may become entrapped in it or pull these over their head and suffocate.

- ▶ Keep packaging material away from children.

Ingesting detergents and care products may lead to poisoning.

- ▶ Keep detergents and laundry care products away from children.

Safety during installation

Warning

Risk of injury!

If the machine is to be placed on a plinth, it must be mounted according to the installation instructions, otherwise this involves danger of tipping or falling.

- ▶ Have the machine installed according to the mounting instructions by qualified and trained personnel.
- ▶ Do not connect an appliance which displays visible damage.

Observe when washing

- ▶ Make certain that transport safety devices have been removed (see installation instructions). Reinstall the transport safety devices for transport temporarily.
- ▶ The maximum load is 8 kg of dry textiles.
- ▶ The water used in washing and rinsing is not drinking water! Route this wash water into a sewage system designed for it.
- ▶ When operating the washing machine at 2000 m above sea level, it is absolutely imperative to activate the temperature limiter to prevent the water from boiling (see service instructions or ask the customer service and / or retailer).
- ▶ Check the hose kit at regular intervals to ensure it can be changed in time to prevent water damage.
- ▶ When closing the door, make sure not to pinch your fingers.
- ▶ Keep pets away from the machine.
- ▶ Do not place any objects on the top cover of the machine: They might slip off and fall to the floor during the spinning process.
- ▶ Ask your dealer or customer service, when in doubt.

Disposal

Packaging from your new machine

All packaging materials used are environmentally friendly and reusable.

Return the packaging to the retailer or supplier.

Dispose of all packaging materials properly.

Processing and reuse saves raw materials and reduces waste volumes.

Disposal of your old machine

Please do not keep your old machine and under no circumstances dispose of it in your normal waste. The old machine contains valuable materials which should be sent for recycling.

Components from your old machine must not be reused. Please ensure that your old machine is disposed of properly.

In this way you can help to ensure environmentally friendly disposal and/or recycling methods.

Additional information on the recycling of this product can be obtained from your commune, your waste disposal.

Washing tips

Detergent

All powder, compact (concentrated), tablet and liquid detergents for use in automatic washing machines can be used.

Pay attention to the materials and colours of the textiles:

Whites	► Strong detergent
Coloureds	► Coloured detergent
Synthetics, viscose, microfibre	► Gentle detergent
Wool, silk, outerwear	► Wool detergent

Detergent dosing

Follow the dosing recommendations on the laundry packaging. The dosing quantities given on the packaging usually refer to full drum loads.

For smaller wash loads reduce the dosing quantity by one third (for machines with load measurement: please note the information on the display).

Rule of thumb: If during the washing a foam layer of the approximate thickness of 2 cm above the washing liquid and / or laundry surface is detected, the dosing quantity has been selected properly.

The correct detergent quantity is dependent on:

- the water hardness
- the quantity of laundry
- the degree of soiling

Water hardness

Water hardness plays an essential role in washing and it is divided in three groups:

Hardness	French (°fH)	German (°dH)
Soft	0 – 15	0 – 8
Medium	15 – 25	8 – 14
Hard	> 25	> 14

Ask your local government about water hardness in your area.

Quantity of laundry

With a half-full drum, reduce the quantity of detergent by one third.

The degree of soiling

lightly soiled

No visible soiling or stains, the clothing has only absorbed body odour for example.

- Reduce the quantity of detergent in accordance with the recommended dose.
- Wash these fabrics in the express programme (this saves time and energy and is gentle to the textiles).

normal soiling

A few faint stains visible.

- Normal dosing as per the dosing recommendation.
- Wash these fabrics in the standard programme.

heavily soiled

Clearly visible soiling and stains.

- ▶ Increased dosing as per the dosing recommendation.
 - ▶ Pre-treat stains.
 - ▶ Select the programme options **Intensive**, **Prewash** or **Soak**.
-

Notice

Insufficient detergent

- ▶ Only becomes apparent after repeated underdosing
- ▶ The laundry becomes grey or not properly clean
- ▶ The laundry becomes hard (board-like)
- ▶ Laundry has grey-brown spots
- ▶ May lead to calcified heating elements

Excess detergent

- ▶ Poorer washing results
 - ▶ Foaming over of the detergent and breakdowns
 - ▶ Higher water consumption and costs
 - ▶ Increased washing programme length
 - ▶ Unnecessary environmental pollution
-

Liquid detergents and start time pre-selection

If the programme is delayed, liquid detergent should not be filled directly into the detergent drawer. Otherwise, it could slowly leak out of the detergent drawer during the pre-selection period, thicken and lead to clogging. .

- ▶ Place liquid detergent in a dosing ball together with the laundry.

Add laundry detergent / Programme with pre-rinsing before pre-washing

If the laundry is pre-rinsed before the pre-wash cycle, fill the **compartment I** with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.

Soap-based detergents

As soap cannot bind the lime contained in the water, you should only use it with soft or medium-hard water, together with a separate water softener. (Without softener, limescale and soap residue can build up in the machine, which will be deposited on laundry in the form of grease spots or as limescale on the heating element.)

- ▶ Activate the setting **Soap wash programme** (see chapter **Settings**).

Water softeners

Special water softening aids can be used in the water hardness ranges «medium» and «hard».

- ▶ Dose detergents according to the hardness level «soft» (follow the instructions on the packaging).
- ▶ Add the detergent first and then the water softener into the same compartment for best washing in results.

Soaking agents

- ▶ Choose the option **Soak**.
- ▶ Add the soaking agents to **compartment I** of the detergent drawer.
- ▶ If a programme with a pre-wash cycle follows a soaking cycle, fill the **compartment I** with laundry detergent for the pre-wash cycle only after water dispensing for the soaking cycle.

Fabric softener, fabric conditioner

Before adding thick fabric softener add water and stir to ensure that it is free of lumps so that the siphon does not get blocked.

- ▶ Add to the fabric softener to **compartment II** of the detergent drawer.

Notice

Do not exceed the «max» mark in the fabric softener compartment. Otherwise it will be washed in at the beginning of the programme together with the detergent.

Bleach, stain removal salt

For bleachable stains you can add powdered laundry bleach and stain removal salt to your laundry detergent.

- ▶ For best washing in results, add the laundry detergent first and then the laundry bleach or stain removal salt into **compartment II**.

Impreginating agent

Breathable all-weather clothing such as GoreTex or SympaTex must only be treated with the specifically designated impreginating agent. Otherwise you risk blocking the breathing membranes.

Proceeding: see **Special programmes / Sportswear / Impregnating**.

Hot water supply

Notice

The max. permissible hot water temperature is 70 °C.

For pre-wash, for programme temperature up to 30 °C as well as for the programmes «Delicates» and «Curtains», only cold water is used.

For programme temperatures from 40 °C, cold and warm water is mixed until the programmed wash temperature is reached.

Notice

In the case of textiles soiled with blood or proteins, select the option **Prewash**. Washing these stains out at a temperature of about 30 °C prevents setting the stain on the fabric at higher temperatures during the main-wash.

Environmentally compatible washing

Your washing machine will operate most efficiently and most environmentally friendly if you fill it with the maximum laundry quantity.

Small loads are uneconomical and result in increased wear of laundry and machine.

Notice

Do not exceed the maximum loading quantities!

Overfilling detracts from the washing result and may lead to fabric damage.

Wash normally soiled laundry without a prewash.

Washing tips

Sorting the laundry

Follow the care symbols in the fabrics.



do not wash

Laundry marked with this care symbol may not be washed in the machine.

Sort the laundry by colour, fabric type and temperature.

Wash whites and coloureds separately, otherwise white laundry will become grey.

Do not wash new coloureds with other laundry due to the risk of discoloration!

Check that brassieres are machine washable.

Knitwear made wholly or partly from wool must also be labelled «non-felting» or «machine washable», otherwise there is a risk of felting during the washing process.



Important

Textiles with metal reinforcements can damage the components of the machine and must not be washed in the washing machine.

- ▶ Wash brassieres with stiffeners in a fine-mesh laundry bag because of the risk of the wires becoming detached in the wash and falling through the drum perforations with resultant damage.

Preparing the laundry

- ▶ Remove foreign bodies such as safety pins, paper clips, coins etc from the laundry.
- ▶ Brush out sand from the pockets and turn-ups.
- ▶ Close zips, hooks, eyelets and Velcro closures.

- ▶ Turn trousers, knitwear or knitted fabrics, e.g. jerseys, T-shirts, sweatshirts inside out.
- ▶ Button up duvet covers and pillowcases and tie fabric belts and apron strings together.
- ▶ Wash laundry with cords and particularly tricky items in mesh bags (Do not exceed 1.5 kg textiles per mesh).

Stain removal


Stains that are not pre-treated may become set on the textiles during the wash. Such stains may be permanent or can only be removed with very strong bleaching agents.

- ▶ Stains should be removed or at least pretreated immediately, as long as they are fresh. Stains which have already dried (in particular in sun light) are much more difficult to remove.
- ▶ Use water, soap, hard soap or pre-wash agents for pre-treating.
- ▶ Dab it on and slightly rub it in. Let it soak, then rinse the textile. It may sometimes be necessary to pretreat, wash or soak textiles several times in order to remove tenacious and dried stains.

In this way it is possible to completely or almost completely remove many typical household stains like gravy, coffee, chocolate, wine, fat, oil, fruit juices, blood, etc.

Dyeing textiles in the washing machine

Starting and interrupting the programme

- ▶ Choose the washing programme according to the information of the dye manufacturer.
- ▶ Press **START** to start the programme.
- ▶ As soon as the water runs in (water is running over the inside of the door glass), press button **Open the door**  (**not lit!**) within 10 seconds. The programme will be interrupted and the door unlocked.

Important


At the end of the 10 seconds, the door can no longer be opened. In this case cancel the programme (see **Washing / Cancelling the programme**) and repeat the procedure.

Adding dye and laundry

- ▶ Place the salt and the dye into the drum, at the bottom.
- ▶ Afterwards add the textiles.
- ▶ Close the door and re-press **START**. The programme is continued.

Machine description



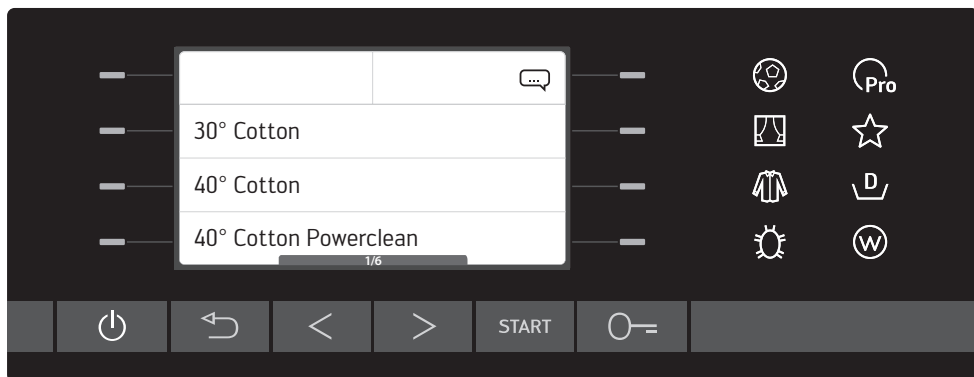

Display and buttons



On / Off



Back in the menu



Scroll backwards



Scroll forwards

START Start programme



Open the door



Language (temporary) /
Settings

1/6

Page number programme menu

Programme groups



Sportswear, outdoor



Homecare



Businesswear



Antibac



Proficlean



Favourites



Disinfection



Wetclean

Detergent drawer



II

Detergent for the main wash, bleach, disinfectants, modular detergent, starch, water softener

B

Fabric softener and other laundry care additives for the final rinse.

I

Detergent for prewash and soaking

A

Lid for liquid detergent

B

Button for unlocking


Pull out the detergent compartment completely

- ▶ Press the release button **B** to remove the detergent drawer.
- ▶ (See **Cleaning and maintenance / Cleaning the detergent drawer**).


Detergent dosing

- ▶ See **Washing tips**.

Liquid detergent

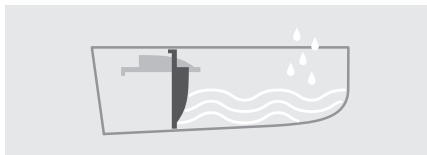

- ▶ Pull the flap **A** down.

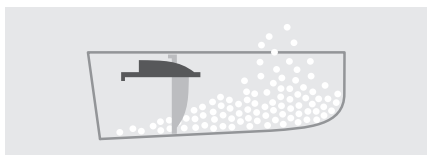

- ▶ For washing powder and tablets, push the flap up and back.

Notice

Liquid detergent can run out slowly and thicken, leading to blockages.

When using start time preset, use a dosing ball for liquid detergents and place it into the drum with your laundry.

- ▶ Use only powder detergents and not liquid detergents for programmes with pre-wash or pre-rinse.
-

USB interface and dosing pumps

(option)

Via the USB interface, own programmes (Proficlean programmes) can be transferred to the machine

Operation with dosing pumps

The Schulthess standard programme for the operation with liquid laundry detergents via dosing pumps can also be configured through the USB interface.

- The required PC software «Wash programme Professional» and the corresponding operating instructions (nr. 539 273) can be found at www.schulthess.ch (Login → Download-Center)

First-time use

- ▶ Install the machine according to the installation instructions.
- ▶ Do not connect an appliance which displays visible damage.
- ▶ Make certain that transport safety devices have been removed.

First wash cycle (without laundry)


The washing machine underwent extensive testing before leaving the factory.


- ▶ Run the first wash cycle without laundry, to remove any water remaining from the manufacturing process.


Preparing the appliance

- ▶ Check if the pump cover is screwed on (see **Cleaning and care**).
- ▶ Switch on the power supply.
- ▶ Open the water tap.

Turn on machine

- ▶ Press button **On / Off** . After starting, the main menu is displayed.

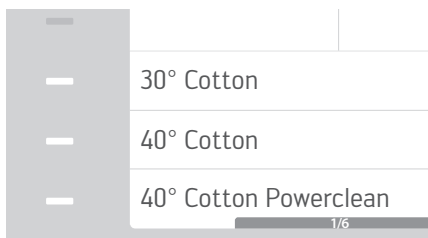


- ▶ Press the arrow button **Scroll forwards**  for the next page of the menu.
- ▶ Tap the light bar next to **60° Cotton**.

Adding the detergent

- ▶ Pull out the detergent drawer until it reaches its stop.
- ▶ Add half a scoop of all purpose detergent to **compartment II** (Do not use mild or wool detergent to avoid foaming).

Starting the programme


- ▶ Press button **START** . After the end of the programme, the machine is ready for use.


Washing


Preparing the appliance

- ▶ Screw on pump cover.
- ▶ Switch on the power supply.
- ▶ Open the water tap.


Turn on machine

- ▶ Press button **On / Off** .
- ▶ After starting, the main menu is displayed.

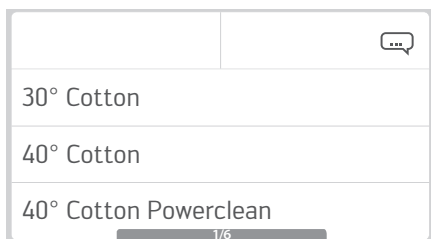


- ▶ Additional menu pages can be opened by pressing the arrow button **Scroll forwards** .

Opening the door

- ▶ Press button **Open the door** .
- The loading door springs open.


Selecting and starting the wash programme

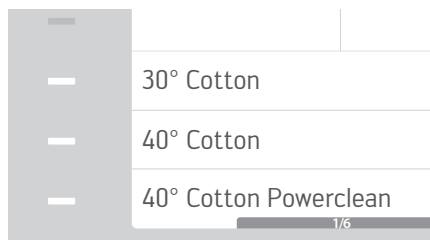


- ▶ Select the desired programme by tapping the light bar. The display shows the programme selected with programme duration, spin speed, maximum load as well as additional selectable options.
- ▶ Select the desired programme options or put the laundry in the machine.

Select programme options

The individual options are described in the chapter **Programme options**.

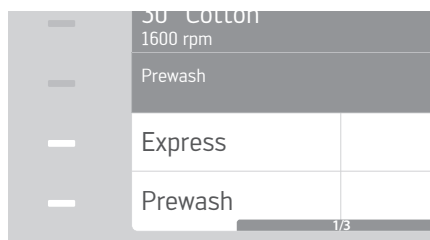

- ▶ Select the desired option/s by pressing the light bar or the corresponding symbol. Selected options change colour and are shown in the upper part of the display.

- ▶ If necessary, cancel the selection by tapping the light bar again.
- ▶ Additional options can be accessed by pressing the arrow button **Scroll forwards** .

Adding laundry

- ▶ Make sure that there is no foreign body in the drum and the detergent drawer (coins, nails, paper clips, etc.).
- ▶ Distribute the laundry evenly in the drum.
- ▶ Mix large and small laundry items.

Closing the door

- ▶ Close the door by pushing it until the lock audibly engages.
- ▶ Ensure that no items of laundry are trapped between the door and the rubber seal.



Adding the detergent

- ▶ Please observe the notes under **Machine description / Detergent drawer**.




Important

Risk of water damage.

Close the detergent drawer after dosing until you feel it lock.

Changing the programme before programme start

- ▶ Press button  **Back in the menu**.
- ▶ Select the programme and options.

Starting the programme

- ▶ Press button **START**.


Prepaid Card / CashCard

Card operated machines do not begin operating until payment has been debited (see **Cashcard / PrePaid Card**).

Skipping to the next programme step



- ▶ Press the light bar next to **Forward** until the desired programme step is displayed.

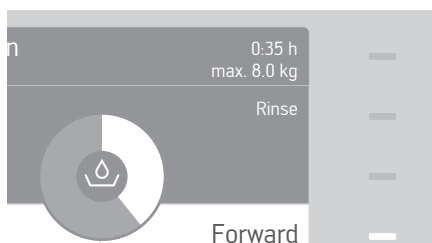


Adding more laundry

- Press button **Open the door**  (is not lit!).



The programme will be interrupted and the door unlocked.

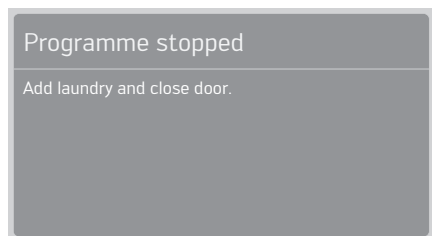


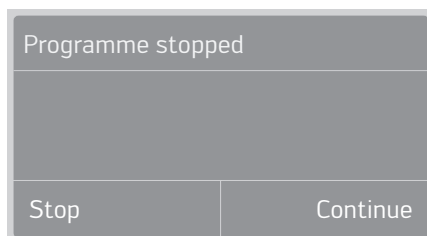
- Follow the directions on the display.

Notice

At the end of 10 seconds, the door can no longer be opened. If this is the case, cancel the programme (see **Washing / Cancelling the programme**) and repeat the process.


Interrupting the programme

- Press button **On / Off**  until the following window is displayed:




Press the light bar next to **Stop**, to end the programme. To resume the programme, press the light bar next to **Continue**.

Cancelling the programme

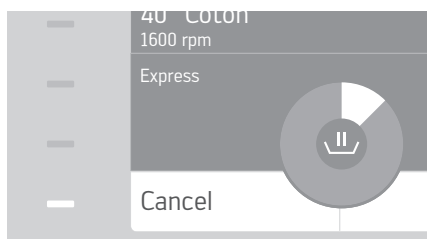


- Press the light bar next to **Cancel** until **End** is displayed. The water will be drained and the programme ends.

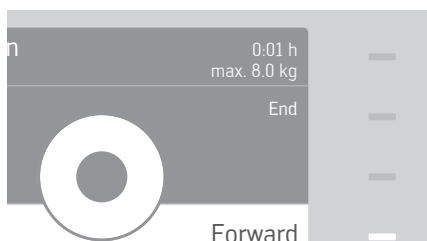

Ending programme with rinsing stop

The laundry will be held in the last rinse water. Now you have two options:


The laundry can be removed dripping wet

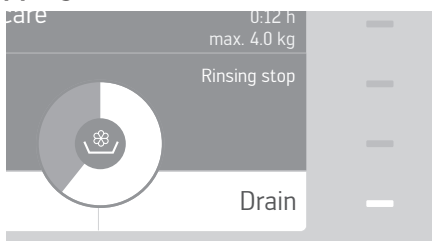

- ▶ Select **Drain**. The rinse water is pumped out and the laundry can be removed.

The laundry can be spun after rinse stop


- ▶ Press button **START**. The water will be pumped out and the laundry spun.

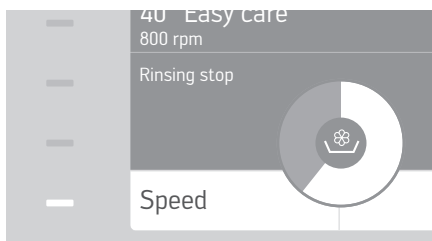

- ▶ To adjust the spin speed before spinning, press the light bar next to **Speed** (see **Programme options / Speed**).

Programme end


The programme end is shown.

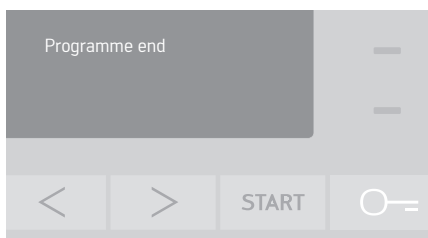

When crease protection is turned on, the drum continues to turn in short intervals after programme end (see **Settings / Crease protection**).

The door can be opened.

Remove the laundry

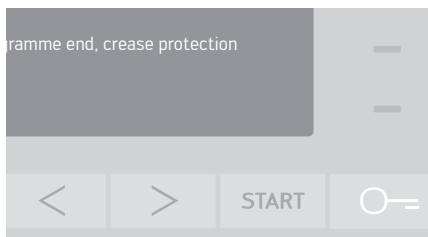


- ▶ Press button **Open the door** (door lock icon).
- ▶ Remove the laundry.

After the wash

- ▶ Remove any foreign objects (e.g. paper clips) from the drum and rubber seal, to avoid iron stains.



- ▶ Leave the door open or opened by a crack after washing. Drying and airing out the drum prevents odour and mould formation.
- ▶ Close the water taps.
- ▶ Press button **On / Off**  until the display turns off.
- ▶ Unplug the machine, when not used for longer periods of time.

Important



Close the water taps. If the water tap is open while the power supply is interrupted, the overflow protection does not function.









Programme survey



⚠ Always check the care symbols on the fabrics

h:min = Duration / l = Water consumption / kWh = Power consumption (Approximate values)

Programmes main menu



max. washing load		h:min	l	kWh
8,0 kg	30° Cotton			
	Jeans, pullover, T-shirts ► Coloured cotton	0:47	72	0,50
8,0 kg	40° Cotton			
	Jeans, pullover, T-shirts, socks ► Coloured cotton	0:50	72	0,8
4,0 kg	40° Cotton Powerclean			
	Jeans, pullover, T-shirts, socks ► Coloured cotton, quick wash ► Small and medium loads	0:57	62	0,85
8,0 kg	60° Cotton			
	Bed linen, aprons, jeans, towels, shirts, underwear ► Coloured cotton, line	1:00	72	1,5
4,0 kg	60° Cotton Powerclean			
	Bed linen, aprons, jeans, towels, shirts, underwear ► Coloured cotton, line, quick wash ► Small and medium loads	0:59	62	1,3
4,0 kg	30° Easy care			
	Outerwear, T-shirts, shirts, sportswear ► Easy care cotton, mixed fibres or textiles with synthetic fibres	0:43	57	0,45
4,0 kg	40° Easy care			
	Outerwear, shirts, blouses, T-shirts, socks ► Easy care cotton, mixed fibres or textiles with synthetic fibres	0:50	69	0,7
4,0 kg	60° Easy care			
	Outerwear, shirts, blouses, aprons ► Easy care cotton, mixed fibres or textiles with synthetic fibres	1:01	69	1,3


max. washing load		h:min	l	kWh
3,2 kg	40° Delicates			
	Curtains, dresses, blouses, skirts, panty hoses, bras ► Particularly sensitive textiles made of cotton or mixed fibres, synthetics or viscose ► Reduce spin speed for textiles prone to creasing	0:52	57	0,75
2,6 kg	20° Hand wash			
	Textiles made from hand-washable wool or wool blend ► Dry wool in a dryer in a basket or briefly dry in a dryer with «Wool finish» and then spread on a terry towel to let air dry	0:34	53	0,1
2,6 kg	30° Wool			
	Machine washable fabrics made of or containing wool ► Wool mark stating «non-felting» or «machine washable» ► Dry as described above	0:36	53	0,3
1,6 kg	30° Silk			
	Handwashables without wool ► Wash panty hoses and bras in a washing net	0:42	55	0,35
4,0 kg	40° Mixed laundry			
	T-shirts, shirts, pullover ► Cotton, mixed fibre fabrics or synthetics	0:52	75	0,75
3,0 kg	30° Quickwash			
	Unsoiled, slightly creased jeans, pullover (sportswear), bathing suits, towelling ► Cotton, mixed fibres and synthetic fibres ► New textiles (removal of production residues)	0:16	30	0,25
8,0 kg	20° Cotton			
	Lightly soiled jeans, pullover, T-Shirts ► Coloured cotton, non-colourfast dyed	0:44	72	0,35
8,0 kg	90° Cotton			
	Bed and table linen, kitchen laundry, towels, aprons, underwear ► White and colourfast cotton and line	1:15	72	2,8

max. washing load		h:min	l	kWh
4,0 kg	70° Baby clothes			
	Diapers, onesies ► White and colourfast cotton ► With pre-rinse (add the detergent to compartment II)	1:34	112	1,7
4,0 kg	40° Baby clothes			
	Onesies, rompers, overalls, pyjamas, shirts, pants ► Easy care cotton or non-iron mixed fibres	1:05	89	0,75
8,0 kg	Rinse, spin			
	For rinsing hand-washed textiles ► Rinse and Spin ► Follow recommended spin speed for textiles prone to creasing	0:17	38	0,1
8,0 kg	Spin			
	► Spin only ► Follow recommended spin speed for textiles prone to creasing	0:10	–	0,1







Sportswear, outdoor


max. washing load		h:min	l	kWh
3,0 kg	30° Sportswear			
	Sports and leisure jackets, weather gear, ski wear, fleece, T-shirts, shorts ► Modern textiles from microfibre or with a high percentage of microfibre, e.g. GoreTex or SympaTex ► Do not use fabric softeners	0:53	72	0,3
4,0 kg	40° Impregnating			
	Sports and leisure jackets, weather gear, ski wear, table linen ► For impregnation of modern textiles from microfibre or with a high percentage of microfibre (e.g. GoreTex or SympaTex), to obtain a water- and dirt repelling effect.	0:51	15	0,55

max. washing load		h:min	l	kWh
2 pair	30° Athletic shoes			
	Washable athletic and leisure shoes made of cotton or synthetic materials (no leather goods) <ul style="list-style-type: none"> ▶ Follow manufacturer's care instructions ▶ Dry shoes in a dryer in a basket or let air-dry ▶ With pre-rinse (add the detergent to compartment II) 	1:07	125	0,5



Homecare



max. washing load		h:min	l	kWh
8,0 kg	60° Terry towels			
	Bath towels, hand towels, bath ropes <ul style="list-style-type: none"> ▶ Cotton 	1:13	98	1,8
8,0 kg	60° Bed linen			
	Bed linens, fitted sheets, comforters <ul style="list-style-type: none"> ▶ Cotton or mixed fibre 	1:09	89	1,3
2,4 kg	60° Duvet, pillows			
	Blankets, pillows, jackets, sleeping bags Feather, down, synthetic or natural hair stuffing <ul style="list-style-type: none"> ▶ Press the air out of the laundry before washing, so that the down is wetted faster ▶ With pre-rinse (add the detergent to compartment II) ▶ Select the pre-wash cycle option: fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle. 	1:19	58	0,85
4,0 kg	60° Cleaning cloths			
	Cleaning cloths, mops <ul style="list-style-type: none"> ▶ Cotton, mixed fibres or microfibre ▶ With pre-rinse (add the detergent to compartment II) 	1:12	95	1,9


max. washing load		h:min	l	kWh
3,2 kg	40° Curtains			
	Curtains labelled as machine washable <ul style="list-style-type: none"> ▶ Mixed fibre fabrics or synthetics ▶ De-select spinning for curtains prone to creasing ▶ With pre-rinse (add the detergent to compartment II) 	0:58	89	0,85
–	70° Autoclean			
	Cleaning the machine. Without laundry and detergent. <ul style="list-style-type: none"> ▶ Hygienically cleans the drum and washing liquor tanks and prevents odour build-up. ▶ If you would like to use a detergent, we recommend the use of the Schulthess R 163 cleaner. In doing so, you will reach an optimal result. ▶ Start the Autoclean programme. Immediately press the Forward button on the light bar. The programme then jumps to the washing programme step. During the dispensing of water, pour approximately 50 ml of cleaner into the compartment II 	0:22	32	0,95

When frequently washing at low temperatures, there is a risk of bacterial contamination.









Businesswear

max. washing load		h:min	l	kWh
2,0 kg	40° Shirts, Iron finish			
	9 shirts or blouses made of cotton or mixed fibres <ul style="list-style-type: none"> ▶ Pre-treat collars and cuffs, depending on degree of soiling ▶ Hang laundry immediately after washing and let air dry. This way you normally do not have to iron. 	1:11	42	0,4
4,0 kg	40° Jeans			
	Jeans, chinos, jackets <ul style="list-style-type: none"> ▶ Cotton or mixed fibre ▶ Wash jeans fabrics inside out 	0:55	65	0,75

max. washing load		h:min	l	kWh
2,6 kg	30° Pullover			
	Pullover	0:45	85	0,45



Antibac

max. washing load		h:min	l	kWh
8,0 kg	40° Cotton Antibac			
	Jeans, pullover, T-shirts, pants, socks ► Coloured cotton	1:02	86	1,1
8,0 kg	60° Cotton Antibac			
	Bed linen, aprons, jeans, towels, shirts, underwear ► Coloured cotton, line	1:14	86	2,0
8,0 kg	90° Cotton Antibac			
	Bed and table linen, kitchen laundry, towels, aprons, underwear ► White and colourfast cotton and line	1:21	86	3,0
4,0 kg	40° Easy care Antibac			
	Outerwear, shirts, blouses, T-shirts, socks ► Easy care cotton, mixed fibres or textiles with synthetic fibres	0:58	67	0,85
4,0 kg	60° Easy care Antibac			
	Outerwear, shirts, blouses, bed and table linen ► Easy care cotton, mixed fibres or textiles with synthetic fibres	1:07	67	1,4
4,0 kg	90° Easy care Antibac			
	Bed and table linen, towels, underwear ► Easy care cotton, mixed fibres or textiles with synthetic fibres, white and colourfast	1:14	67	2,0



Disinfection

Disinfection is not guaranteed when the heating variant «Hot water» (without heating) is used.

To dose the disinfectant, use a liquor ratio of 1:5, based on the maximum washing load.





Use the listed disinfectants.

max. washing load		h:min	l	kWh
8,0 kg	40° Cotton disinfection 20 min.			
	► Additional prewash connectible	1:15	107	1,7
8,0 kg	60° Cotton disinfection 10 min.			
		1:18	104	2,8
8,0 kg	60° Cotton disinfection 15 min.			
		1:23	104	2,8
8,0 kg	60° Cotton disinfection 20 min.			
	► Additional prewash connectible	1:28	104	2,8
8,0 kg	70° Cotton disinfection 10 min.			
		1:22	104	3,2
8,0 kg	85° Cotton disinfection 15 min.			
	Laundry is thermically disinfected in the main wash ► Additional prewash connectible	1:36	102	4,1
4,0 kg	40° Easy care disinfection 20 min.			
		1:03	69	0,95
4,0 kg	60° Easy care disinfection 20 min.			
		1:12	72	1,5
4,0 kg	85° Easy care disinfection 15 min.			
	Laundry is thermically disinfected in the main wash	1:14	69	2,2



Wetclean

max. washing load		h:min	l	kWh
4,8 kg	25° Wetclean 4.0			
	Suits, costumes, men's jackets, blouses, coats etc. which are labelled with	0:28	35	0,2
4,8 kg	40° Wetclean 4.0			
	Suits, costumes, men's jackets, blouses, coats etc. which are labelled with hand wash or washable Suits, costumes, men's jackets, blouses, coats etc.	0:32	35	0,6
4,0 kg	40° Wetclean basic			
	Suits, costumes, men's jackets, blouses, coats etc. which are labelled with hand wash or washable Suits, costumes, men's jackets, blouses, coats etc.	0:59	95	1,2
4,0 kg	40° Outerwear disinfection 10 min.			
	Suits, costumes, men's jackets, blouses, coats etc. which are labelled with hand wash or washable ► Laundry is chemothermically disinfected in the wash step (10 min. at 40°C / linen-water ratio 1 : 4 regarding the max. quantity of washing load) ► Use the listed disinfectants. Using the dosing pumps, follow the indicated dosing featured in the manufacturer's instructions	0:55	52	0,75
3,0 kg	40° Blankets			
	Washable wool blankets (bedspreads)	1:07	99	0,8
2,6 kg	25° Cashmere, Angora			
	Cashmere, angora, viscose	0:38	55	0,3
3,2 kg	25° Silk			
	Handwashables without wool ► Wash panty hoses and bras in a washing net	0:42	55	0,25

max. washing load		h:min	l	kWh
3,2 kg	25° Curtains, extra gentle			
	Curtains labelled as machine washable <ul style="list-style-type: none"> ▶ Mixed fibre fabrics or synthetics ▶ De-select spinning for curtains prone to creasing ▶ With pre-rinse (add the detergent to compartment II) 	0:46	79	0,25
3,0 kg	30° Sportswear / microfibre			
	Sports and leisure jackets, weather gear, ski wear, fleece, T-shirts, shorts <ul style="list-style-type: none"> ▶ Modern textiles from microfibre or with a high percentage of microfibre, e.g. GoreTex or SympaTex ▶ Do not use fabric softeners 	0:53	72	0,3
4,0 kg	40° Impregnating			
	Sports and leisure jackets, weather gear, ski wear, table ware <ul style="list-style-type: none"> ▶ For after treatment of leisure clothing and table ware, in order to achieve a water and dirt repellent outfit. 	0:51	15	0,55
2,4 kg	25° Leather goods			
	For leather jackets, skirts and trousers	0:46	79	0,2















Facility cleaner Proficlean

Disinfection is not guaranteed when the heating variant «Hot water» (without heating) is used.

To dose the disinfectant, use a liquor ratio of 1:5, based on the maximum washing load.

Use the listed disinfectants.

max. washing load		h:min	l	kWh
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres <ul style="list-style-type: none"> ▶ With pre-rinse 	1:11	109	2,1
8,0 kg	40° Mops disinfection 20 min.			
	<ul style="list-style-type: none"> ▶ With pre-rinse 	1:23	130	1,7

max. washing load		h:min	l	kWh
8,0 kg	60° Mops disinfection 10 min.			
	► With pre-rinse	1:28	130	2,8
8,0 kg	60° Mops disinfection 15 min.			
	► With pre-rinse	1:33	130	2,8
8,0 kg	60° Mops disinfection 20 min.			
	► With pre-rinse	1:38	130	2,8
8,0 kg	70° Mops disinfection 10 min.			
	► With pre-rinse	1:33	130	3,3
8,0 kg	85° Mops disinfection 15 min.			
	► With pre-rinse	1:42	128	3,8
4,0 kg	40° Wash before first use			
	New mops, cleaning cloths, etc. ► For removing production residues	0:43	65	0,6
4,0 kg	60° Cleaning cloths			
	Wiping cloths, mops Cotton, mixed textiles or microfibres ► With pre-rinse (add the detergent to compartment II)	1:12	95	1,9
4,0 kg	30° Pads			
	For pet discs will low water absorption	0:50	82	0,6
4,0 kg	60° Polishing discs			
	For floor polishing pads or polishing discs ► Microfibres	1:06	82	1,7
3,2 kg	40° Curtains			
	Curtains labelled as machine washable ► Mixed fibre fabrics or synthetics ► De-select spinning for curtains prone to creasing ► With pre-rinse (add the detergent to compartment II)	0:58	89	0,85

max. washing load		h:min	l	kWh
–	70° Autoclean			
	<p>Cleaning the machine. Without laundry and detergent.</p> <ul style="list-style-type: none"> ▶ Hygienically cleans the drum and washing liquor tanks and prevents odour build-up. ▶ If you would like to use a detergent, we recommend the use of the Schulthess R 163 cleaner. In doing so, you will reach an optimal result. ▶ Start the Autoclean programme. Immediately press the Forward button on the light bar. The programme then jumps to the washing programme step. During the dispensing of water, pour approximately 50 ml of cleaner into the compartment II 	0:22	32	0,95

When frequently washing at low temperatures, there is a risk of bacterial contamination.



Retirement homes Proficlean






max. washing load		h:min	l	kWh
2,4 kg	60° Duvet, pillows			
	<p>Feather, down, synthetic or natural hair stuffing</p> <ul style="list-style-type: none"> ▶ With pre-rinse ▶ Select the pre-wash cycle option: fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle. 	1:19	58	0,85
8,0 kg	70° Incontinence			
	<ul style="list-style-type: none"> ▶ Cotton or mixed textiles ▶ With pre-rinse and prewash ▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle. 	1:42	158	2,4
4,0 kg	40° Outerwear disinfection 10 min.			
	<p>Suits, costumes, men's jackets, blouses, coats etc. which are labelled with hand wash or washable</p> <ul style="list-style-type: none"> ▶ Laundry is chemothermically disinfected in the wash (10 min. at 40°C / linen-water ratio 1 : 4 regarding the max. quantity of washing load) ▶ Use the listed disinfectants. 	0:55	52	0,75

max. washing load		h:min	l	kWh
4,0 kg	40° Outerwear disinfection 20 min.			
	Outerwear which is labelled with hand wash or washable: Suits, costumes, men's jackets, blouses, coats etc. ► With pre-rinse ► Laundry is chemothermically disinfected in the main wash (20 min. at 40°C / linen-water ratio 1:5 regarding the max. quantity of washing load) ► Use the listed disinfectants.	1:24	94	1,2
4,0 kg	40° Residents laundry			
	► Cotton or mixed textiles	0:46	72	0,85
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres ► With pre-rinse	1:11	109	2,1
8,0 kg	60° Bed linen and bath towels			
	Cotton or mixed fibre	1:16	125	2,2
4,0 kg	60° Workwear			
	► Cotton or mixed textiles ► With prewash	1:03	69	1,2
8,0 kg	70° Kitchen wear			
	Mixed textiles ► With prewash	1:22	115	2,4
8,0 kg	90° Kitchen wear intensive			
	Mixed textiles ► With pre-rinse and prewash ► Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:39	148	3,4



Commercial company Proficlean

max. washing load		h:min	l	kWh
8,0 kg	90° Overdresses			
	<ul style="list-style-type: none">▶ Cotton or mixed textiles▶ With pre-rinse and prewash▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:51	153	4,0
4,0 kg	30° Capes			
	<p>Lightly soiled capes</p> <ul style="list-style-type: none">▶ Synthetics or mixed fibres	0:36	45	0,35
8,0 kg	60° Cotton disinfection 20 min.			
	<p>Laundry is chemothermically disinfected in the main wash (20 min. at 60°C / linen-water ratio 1:5 regarding the max. quantity of washing load)</p> <ul style="list-style-type: none">▶ Use the listed disinfectants.▶ Additional prewash connectible	1:28	104	2,8
8,0 kg	85° Cotton disinfection 15 min.			
	<p>Laundry is thermically disinfected in the wash (15 min. at 85°C / linen-water ratio 1:5 regarding the max. quantity of washing load)</p> <ul style="list-style-type: none">▶ Additional prewash connectible	1:36	102	4,1
8,0 kg	40° Hand Towels express			
	<p>For lightly soiled hand towels</p> <ul style="list-style-type: none">▶ Cotton	0:48	89	0,75
8,0 kg	60° Hand Towels			
	<p>Badly soiled towels</p> <ul style="list-style-type: none">▶ Cotton	1:08	89	1,75
4,0 kg	60° Workwear			
	Cotton or mixed textiles	1:03	69	1,2





max. washing load		h:min	l	kWh
8,0 kg	90° Butcher's wear			
	Cotton or mixed textiles ▶ With 2x pre-rinsing and prewash ▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:51	145	3,2
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres ▶ With pre-rinse	1:11	109	2,1
8,0 kg	90° Flour stained linen			
	Flour-stained and grease-stained linen ▶ Cotton or mixed textiles ▶ With pre-rinse and prewash ▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:33	125	3,2
8,0 kg	70° Kitchen linen			
	▶ Mixed textiles ▶ With prewash	1:22	115	2,4
8,0 kg	90° Kitchen linen intensive			
	▶ Mixed textiles ▶ With pre-rinse and prewash ▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:39	148	3,4
–	70° Autoclean			
	Cleaning the machine. Without laundry and detergent. ▶ Hygienically cleans the drum and washing liquor tanks and prevents odour build-up. ▶ If you would like to use a detergent, we recommend the use of the Schulthess R 163 cleaner. In doing so, you will reach an optimal result. ▶ Start the Autoclean programme. Immediately press the Forward button on the light bar. The programme then jumps to the washing programme step. During the dispensing of water, pour approximately 50 ml of cleaner into the compartment II .	0:22	32	0,95

When frequently washing at low temperatures, there is a risk of bacterial contamination.







Gastronomy Proficlean



max. washing load		h:min	l	kWh
4,0 kg	60° Table linen			
	Table cloths and napkins ▶ Cotton, linen and mixed fibres ▶ Prewash connectible	0:58	48	1,0
8,0 kg	60° Bed linen			
	Bed linens, fitted sheets, comforters ▶ Cotton or mixed fibre	1:09	89	1,3
8,0 kg	60° Terry towels			
	Bath towels, hand towels, bath ropes ▶ Cotton	1:13	98	1,8
8,0 kg	70° Kitchen linen			
	▶ Mixed textiles ▶ With prewash	1:22	115	2,4
8,0 kg	90° Kitchen linen intensive			
	▶ Mixed textiles ▶ With pre-rinse and prewash ▶ Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:39	148	3,4
8,0 kg	40° Flour stained linen			
	Flour-stained and grease-stained linen ▶ Cotton or mixed textiles ▶ With pre-rinse and prewash	1:06	105	0,8
8,0 kg	Finishing, cold			
	Conditioning, starching or impregnating ▶ Add the liquid finishing agent to compartment  (max. 2dl)	0:19	22	0,1
8,0 kg	60° Cotton Disinfection 20 min.			
	Laundry is chemothermally disinfected in the main wash (20 min. at 60°C / linen-water ratio 1:5 regarding the max. quantity of washing) ▶ Use the listed disinfectants. ▶ Additional prewash connectible	1:28	104	2,8

max. washing load		h:min	l	kWh
2,4 kg	60° Duvet, pillows			
	Feather, down, synthetic or natural hair stuffing ▶ With pre-rinse ▶ Select the pre-wash cycle option: fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:19	58	0,85
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres ▶ With pre-rinse	1:11	109	2,1
4,0 kg	60° Guests laundry			
	Shirts, blouses, T-shirts, socks	1:03	82	1,3
3,2 kg	40° Curtains			
	Curtains labelled as machine washable ▶ Mixed fibre fabrics or synthetics ▶ De-select spinning for curtains prone to creasing ▶ With pre-rinse (add the detergent to compartment II)	0:58	89	0,85




Wellness center Proficlean






max. washing load		h:min	l	kWh
8,0 kg	60° Terry towels			
	Bath towels, hand towels, bath ropes ▶ Cotton	1:13	98	1,8
8,0 kg	60° Hand towels			
	Badly soiled towels ▶ Cotton	1:08	89	1,75
8,0 kg	40° Hand towels Express			
	For lightly soiled hand towels ▶ Cotton	0:48	89	0,75
8,0 kg	60° Bed linen			
	Bed linens, fitted sheets, comforters ▶ Cotton or mixed fibre	1:09	89	1,3

max. washing load		h:min	l	kWh
8,0 kg	60° Cotton Disinfection 20 min.			
	Laundry is chemothermically disinfected in the main wash (20 min. at 60°C / linen-water ratio 1:5 regarding the max. quantity of washing load) ► Use the listed disinfectants. ► Additional prewash connectible	1:28	104	2,8
8,0 kg	85° Cotton Disinfection 15 min.			
	Laundry is thermically disinfected in the wash (15 min. at 85°C / linen-water ratio 1:5 regarding the max. quantity of washing load) ► Additional prewash connectible	1:36	102	4,1
4,0 kg	60° Cleaning cloths			
	Wiping cloths, mops ► Cotton, mixed textiles or microfibres ► With pre-rinse (add the detergent to compartment II)	1:12	95	1,9
8,0 kg	60° Mops			
	Cotton or mixed textiles ► With pre-rinse	1:11	109	2,1
2,4 kg	60° Duvet, pillows			
	Feather, down, synthetic or natural hair stuffing ► With pre-rinse ► Select the pre-wash cycle option: fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:19	58	0,85



Campsites, laundries Proficlean

max. washing load		h:min	l	kWh
4, 0 kg	40° Mixed laundry			
	T-shirts, shirts, pullover ► Cotton, mixed fibre fabrics or synthetics	0:52	75	0,75



max. washing load		h:min	l	kWh
3,0 kg	30° Quickwash			
	Non-soiled jeans, pullover (sportswear), bathing suits, towelling that are lightly creased ▶ Cotton, mixed fibres and synthetic fibres ▶ New textiles (removal of production residues)	0:16	30	0,25
8,0 kg	60° Terry towels			
	Bath towels, hand towels, bath ropes ▶ Cotton	1:13	98	1,8
8,0 kg	60° Bed linen			
	Bed linens, fitted sheets, comforters ▶ Cotton or mixed fibre	1:09	89	1,3
3,0 kg	30° Sportswear			
	Sports and leisure jackets, weather gear, ski wear, fleece, T-shirts, shorts ▶ Modern textiles from microfibre or with a high percentage of microfibre, e.g. GoreTex or SympaTex ▶ Do not use fabric softeners	0:53	72	0,3
8,0 kg	70° Kitchen wear			
	Mixed textiles ▶ With prewash	1:22	115	2,4
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres ▶ With pre-rinse	1:11	109	2,1
–	70° Autoclean			
	Cleaning the machine. Without laundry and detergent. ▶ Hygienically cleans the drum and washing liquor tanks and prevents odour build-up. ▶ If you would like to use a detergent, we recommend the use of the Schulthess R 163 cleaner. In doing so, you will reach an optimal result. ▶ Start the Autoclean programme. Immediately press the Forward button on the light bar. The programme then jumps to the washing programme step. During the dispensing of water, pour approximately 50 ml of cleaner into the compartment II 	0:22	32	0,95

When frequently washing at low temperatures, there is a risk of bacterial contamination.



Hospitals, clinics Proficlean

max. washing load		h:min	l	kWh
8,0 kg	70° Incontinence			
	Cotton or mixed textiles ► With pre-rinse and prewash ► Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:42	158	2,4
4,0 kg	40° Patients laundry			
	Cotton or mixed textiles	0:46	72	0,85
4,0 kg	60° Workwear			
	Cotton or mixed textiles	1:03	69	1,2
4,0 kg	60° OP laundry Disinfection 20 min.			
	Laundry is chemothermically disinfected in the main wash (20 min. at 60°C / linen-water ratio 1:5 regarding the max. quantity of washing load) ► Use the listed disinfectants. ► With pre-rinse and prewash ► Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:33	122	2,0
8,0 kg	60° Mops			
	Cotton, mixed textiles or microfibres	1:11	109	2,1
8,0 kg	60° Bed and bath towels			
	Cotton or mixed fibre	1:16	125	2,2
8,0 kg	90° Kitchen wear intensive			
	Mixed textiles ► With pre-rinse and prewash ► Fill the compartment I with laundry detergent for the pre-wash cycle only after water dispensing for the pre-rinse cycle.	1:39	148	3,4

max. washing load		h:min	l	kWh
3,2 kg	40° Curtains			
	Curtains labelled as machine washable ▶ Mixed fibre fabrics or synthetics ▶ De-select spinning for curtains prone to creasing ▶ With pre-rinse (add the detergent to compartment II)	0:58	89	0,85
4,0 kg	40° Paramedical clothing Impregnating			
	Jackets, mission jackets with wind stoppers, fleece, rain clothing ▶ Washing and Impregnating. ▶ The programme is not suitable for manual dosing. Use liquid laundry detergents and dosing pumps.	1:33	99	1,5

Special programmes

Pressing the symbol button the menu of the respective programme group is called up.

Sportswear



The sportswear programmes are suitable for weather gear, sports and leisure jackets as well as modern clothing made of microfibre or with a high microfibre content, e.g. Gore-Tex or SympaTex.

- ▶ Only use mild detergents, for GoreTex and SympaTex, too.
- ▶ Add liquid detergent to a dosing ball and place it into the drum with your laundry.

Notice

Do not use fabric softener. This can block the breathable membranes and prevent successful subsequent impregnation.



Pre-treating stains

Heavy stains e.g. fat, sun cream, lipstick or cosmetics, require suitable pre-treatment:

- ▶ Rub liquid gentle detergent directly into the stain with your fingers. Do not scrub (Risk of damage to the fabric!).
- ▶ Leave to work for around 5 minutes and then wash the items in the washing machine.

Impregnating

To prepare the laundry for impregnation, it must first be washed clean and rinsed with cleaning vinegar:

- ▶ Add the laundry.
- ▶ Add the detergent.
- ▶ Pour the cleaning vinegar into **compartment** , until it reaches the marking **max**.
- ▶ Run the programme **Sportswear, outdoor**.
- ▶ Immediately after the washing programme is completed, start the **Impregnating** programme.
- ▶ Add 3,5 dl impregnants at the same time the water runs in into **compartment** .
- ▶ After impregnation in the washing machine, the laundry shall be dried completely at the maximum admissible temperature for the respective textiles.

Notice

Microfibre fabrics, GoreTex and SympaTex should only be treated with special impregnation products designed for them. Otherwise, there is a risk that the breathable membranes become clogged.

Homecare



Because of their high water level and low spin speed, homecare programmes are particularly well suited for household textiles made of mixed fabrics and synthetics.

- ▶ Select **Rinsing stop** to prevent creasing at the end of the programme.
- ▶ Place metal rings or plastic hooks in a laundry net or bag (cushion cover).

Important

Older curtains are often very bleached by the sun and no longer very resistant. Machine washing can therefore cause slight damage.

Businesswear



Usually there is no need to iron on-iron shirts and blouses.

- ▶ Hang the shirts and blouses up and let them air dry.
- ▶ Pre-treat heavily soiled collars and cuffs.

Antibac



The Antibac programme kills harmful germs and mites to a great extent and flushes out allergens especially well.


Favourites



Your 6 most frequently used programmes (including selected options) are automatically saved under the star button.

The **Time preset**, **Rinsing stop** and **Soaking** options are not being stored.

- ▶ Use the star button to call up and start your favourite programmes quickly and easily.

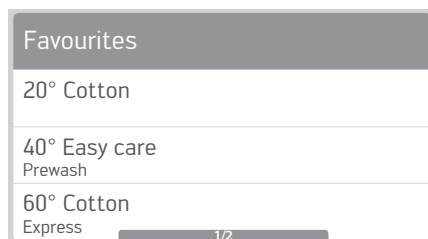

Favourites as start menu

You can also call up your saved favourite programmes directly on the display, when you start the machine (see **Settings / Start menu selection**).

Delete favourites

See **Settings / Delete favourites**.

Disinfection



Programme group for optimal cleaning of heavily soiled laundry, e.g. for textiles with bleachable spots (fruit, coffee, tea, red wine etc.).

Notice

Due to the lack of heating, disinfection is not guaranteed if the heating variant «Hot Water» (without heating) is used: In this case, the disinfection programmes can only be used as non-disinfecting washing programmes.

- ▶ Use the listed disinfectants.
- ▶ Dose the disinfectant for a liquor ratio of 1: 5, based on the maximum laundry load.
- ▶ In the case of highly water-absorbing laundry (e.g. terry cloth), increase the quantity of the disinfectant to a liquor ratio of 1: 6, based on the maximum laundry load.
- ▶ If the absorbency behaviour deviates strongly, the actual liquor ratio for the laundry must be determined.
- ▶ If disinfectant powder is used, this is to be put in the **compartment II** prior to the start of the programme.
- ▶ After a malfunction (e.g. in the event of a power failure or excessive foaming) the disinfection programme must be repeated using disinfectant.

Dosing pumps (option)

Through the use of dosing pumps, liquid disinfecting agents are poured only when the disinfecting temperature has been reached (see **Machine description / USB interface and dosing pumps**).

If a significant amount of rinsing water is required, the actual total liquor ratio must be determined and the disinfectant amount adjusted.

Wetclean



Wet cleaning process for gentle care of high-quality, sensitive textiles. Even heavily soiled laundry can be thoroughly cleaned at low temperatures.

Proficlean



Proficlean-Sets include specialized programmes for different application areas:

- ▶ **Proficlean (separate, self-written programmes)**
- ▶ **Facility cleaner**
- ▶ **Retirement homes**
- ▶ **Commercial**
- ▶ **Gastronomy**
- ▶ **Wellness center**
- ▶ **Camp site, laundries**
- ▶ **Hospitals, clinics**


The desired group can be activated via the setting **Proficlean set** (see **Settings / Proficlean set**).

Press the **Proficlean** button to display the menu of the active programme group (see **Programme survey**).

Programme options

By also selecting one or more options, a wash programme can be specifically tailored to the particular characteristics of the laundry.

Programme options are only activated for the duration of the current wash programme.

Long-term modifications can be made in the user settings (Menu  **Settings**) and stay activated until they are changed again.

Notice

The programme options **Disinfection**, **Express**, **Intensive** and **Prewash** are mutually exclusive, therefore only one of these options can be selected.

Express

Gentle and energy-saving washing of lightly soiled textiles. Reduces washing time.

- ▶ Maximum load: 4 kg
- ▶ For small loads of washing or light soiling, reduce the amount of detergent (see manufacturer's information on the package).

Prewash

For particularly heavily soiled laundry with bad stains (e.g. blood, protein-containing stains etc.) as well as occupational laundry.

The prewash temperature is 30 °C.

Add 1/4 of the detergent to **compartment I**.

- ▶ Use powder detergent.

Intensive

For heavily soiled textiles, especially for bleachable stains (e.g. fruit, coffee, tea, red wine, oil).

The washing time is extended.

Rinse +

By selecting an additional rinse cycle, the rinse result can be improved (for soft water areas and allergy sufferers).

Water +

If laundry is heavily soiled, increasing the amount of water in the drum can improve the washing result. More water also helps to rinse out dirt and laundry detergents (for garments worn directly against the skin and for people with sensitive skin).

Temperature

The temperature can be reduced in 10 °C stages. The display shows the current temperature.


- Reduce the preset temperature by tapping the light bar next to **Temperature**.

Notice

The temperature cannot be lowered for the programmes **Disinfection**, **70°Autoclean**, **Antibac** and **Incontenance linen**

Spin speed

Select a lower spin speed for a gentler treatment of your laundry. The current spin speed is shown on the display.

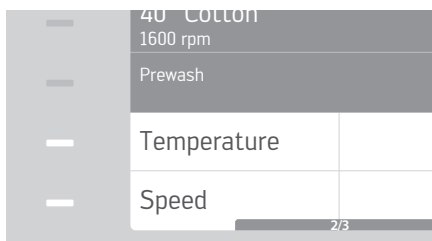

- Tapping the light bar next to **Spin speed** reduces the spin speed in steps of 100 rpm
At 0 rpm the laundry is not spun and can be removed wet.

Notice

Select a high spin speed for laundry that will be dried in a dryer or ironed with a finisher. Well-drained laundry needs much less energy and time for machine drying.

Rinsing stop

The «Rinsing stop» function is used to avoid creasing of sensitive fabrics. The laundry is held in the last rinse water.

- You can end the programme by draining the water without spinning or by spinning (see **Washing / Ending programme with rinsing stop**).

Half load


For environmentally-friendly washing of small amounts of laundry. The amount of water used is reduced by half and the programme duration is shortened.

- Maximum load: half of the maximum laundry load specified for the selected programme
- The pump running time of dosing pumps is shortened to approx. 2/3.


Notice

Half load is not available for some washing programmes (e.g. **Disinfection**)

Soaking

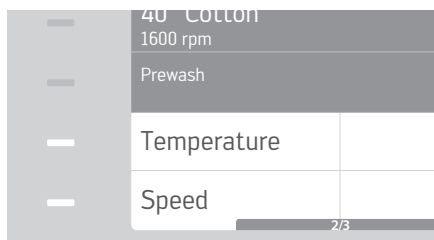


- ▶ Tap the light bar next to **Soaking**.

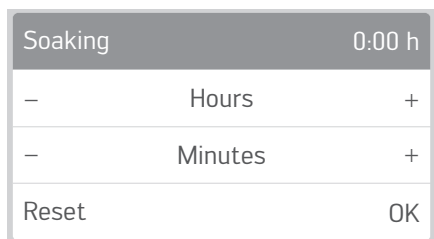

- ▶ Enter the desired soaking time by tapping the light bar (15 min-steps / max. 24 hours).
- ▶ Confirm your entry with **OK**.
- ▶ Press button **START**.

The soaking time starts, the remaining time until programmes start is displayed.

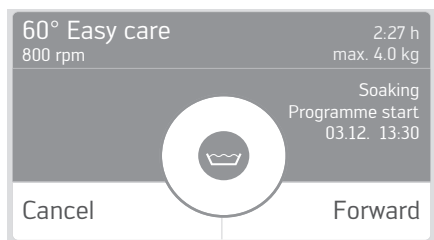

- ▶ The selected programme starts automatically after soaking.
- ▶ Select **Forward** to start the washing programme immediately.

Notice

In case of a power interruption, the current soaking time is saved. The duration of the power interruption has no effect.

- ▶ Add soaking detergent to **compartment I** the laundry detergent to **compartment II**.
- ▶ The **Soaking** option is not available with the **Disinfection, Express** and **Antibac** programmes.

Time preset

- ▶ With the option **Time preset** the start time of the programme can be delayed and thus suit your lifestyle (e.g. taking advantage of cheaper night-time electricity).

Notice

- ▶ Check, if the time on the machine is set correctly (see **Settings / Menu Settings / Time**).
- ▶ When using liquid detergent, fill the detergent into dosing ball and place it into the drum with your laundry.
- ▶ First select the desired programme.
- ▶ Press the symbol button **Time preset**.

Programme end		04.09. 13:15h
–	Date	+
–	Time	+
Reset	OK	

- ▶ Enter date and time for the programme end by tapping the light bar (15 min-steps).
- ▶ Confirm the entry with **OK** and press **START**.

The preset time starts. The remaining time until programmes start is displayed.

60° Easy care		0:39 h
800 rpm		max. 4.0 kg
<div> <div></div> <div>Time preset</div> <div>Programme start</div> <div>03.12. 21:00</div> </div>		
Cancel	Forward	


- ▶ The selected programme starts automatically when the start time is reached.
- ▶ Pressing the start button again cancels time preset and the washing programme can be started immediately.

Settings

Your washing machine has default settings from the factory. The settings can be adapted to the users individual needs either when first used or later using the following functions. The settings can only be changed if no wash programme is running.

Notice


Certain settings on your machine can be blocked. However, the **Language** (temporary), **Date** and **Time** functions are always available.

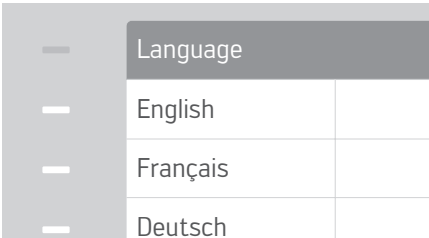

Language	
English	
Français	
Deutsch	

- ▶ Select the desired language. Additional languages can be accessed by pressing the **arrow buttons**



Pressing the button **Back in the menu**  ends the menu **Language**.


Notice


This language will remain active until the machine is switched off or goes into standby. The language then returns to the default language.

Language (temporarily)




A second language can be selected temporarily via the **Language** menu.

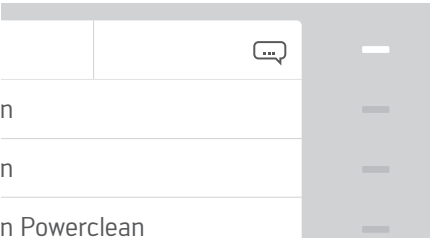


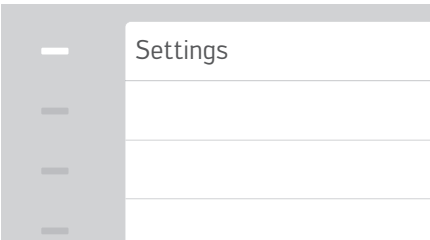
- ▶ Tap the light bar next to . The menu **Language** is displayed.

Menu Settings


* = Default settings
(Some device variants have different factory default settings.)

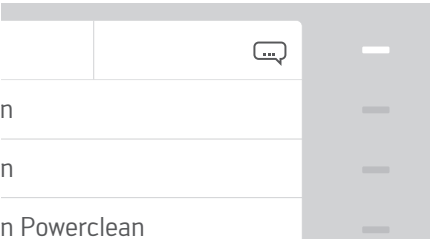

- ▶ Press the light bar next to  until the menu **Settings** is displayed.



- ▶ Tap the light bar next to **Settings**. The menu **Date / Time** is displayed.

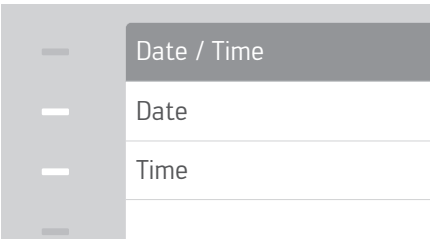

- ▶ Select the desired setting.


Date

- ▶ **Default settings**
By pressing the + and – on the light bar, you can change the month and day (keep finger pressed to scroll rapidly)
- ▶ Confirm entry by pressing the light bar next to **OK**.


Time

- ▶ **Default settings**
By pressing the + and – on the light bar, you can change the hour and minute (keep finger pressed to scroll rapidly)
- ▶ Confirm entry by pressing the light bar next to **OK**.

Save changes

Pressing the button **Back in the menu**  (or after no more than 2 minutes after the last entry) ends the menu **Date / Time**.
Changes must be confirmed when exiting the menu.



Pressing the button **Back in the menu**  (or after no more than 2 minutes after the last entry) ends the menu **Settings**.

More settings

The following settings are not available for all appliances.

Language (default language)

► **Deutsch ***


► **.....**

Additional menu pages can be opened by pressing the **arrow buttons**



- Select the desired language by tapping the light bar.

Notice

If a different language is temporarily selected within the **Language**  menu, the setting returns to the default language when the machine is switched off or in standby mode.

Daylight savings / standard time

► **On ***

► **Off**

The automatic change of the time display to daylight savings time can be turned off.

Display programme time

► **Duration ***

The display shows the remaining time of the programme.

► **End**

The display shows when the programme will be finished.

Brightness display

► **50 ***

The background light intensity can be continuously adjusted from 20 to 100 % (hold bar for fast forward).

- Confirm entry with **OK**.

Signal tone volume

► **Off**

► **Volume 1**

► **Volume 2**

► **Volume 3 ***

► **Volume 4**

► **Volume 5**

The signal tone can be adjusted in 5 steps or set on silent.

Button tone

► **On ***

► **Off**

The button tone can be turned off.

Extra rinse

- ▶ **Off ***
- ▶ **On**

Additional rinsing improves the rinse result in soft water areas or for allergy sufferers.

The selected setting affects all washing programmes until the next change of the settings.

If only the selected washing programme should receive an additional rinse, select option **Rinse +**.

Water level washing

- ▶ **Normal ***
- ▶ **Increased**

If the function is set to «Increased» the water level is higher during washing in all washing programmes.

Water level rinse

- ▶ **Normal ***
- ▶ **Increased**

If the function is set to «Increased» the water level is higher during rinsing in all washing programmes.

Skin care

- ▶ **Off ***
- ▶ **On**

If the function is set to «On» all washing programmes have two additional rinse cycles, which reduces skin allergies.

Hygiene function

- ▶ **Off ***
- ▶ **On**

If the hygiene function is switched on, you will be told to conduct a preliminary machine clean when you select a low-temperature wash programme (see **Cleaning and maintenance**).

Soap wash programme

- ▶ **Off ***
- ▶ **On**

A programme sequence optimised for the use of soap detergents by using and extra rinse cycle to more thoroughly rinse out the soap detergent.

The selected setting affects all washing programmes until the next change of the settings.

Spin speed

- ▶ **Not reduced ***
- ▶ **Reduced**
- ▶ **Reduced +**


The spin speed can be reduced by two levels for all wash programmes.

Child lock

- ▶ **Off ***
- ▶ **On**

The child lock is to prevent accidental starting, changing or deletion of a programme by small children.


Input with child lock activated

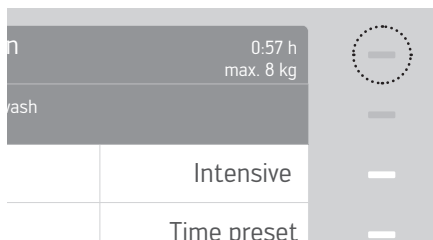

- ▶ Hold the **light bar in the upper right** pressed down (**is not lit!**).
- ▶ At the same time press the desired button.

Delete favourites

- ▶ Select the function.

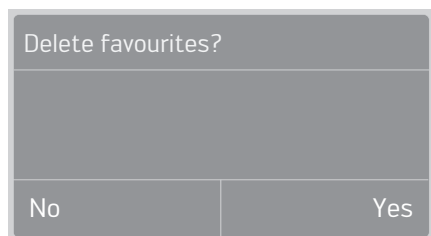

- ▶ You need to confirm the deletion of the favourites.

Start menu selection

- ▶ **Standard ***
- ▶ **Favourites**
- ▶ **ProficleanSet**

You can call up your saved favourite programmes directly in the start menu, when you start the machine. Your favourite programmes are displayed immediately – the quickest way to make your selection.

- ▶ After changing the settings, the machine must be turned off briefly and turned on again to show the selected start menu.

Switch off the machine

Settings for switching of the machine automatically:

- ▶ **Off**
The machine always remains switched on.

- ▶ **On**
The machine turn off automatically after the programme has ended or when no further action is taken after turning the machine on.


- ▶ **Standby + ***
A few minutes after the programme has ended or when no further action is taken after turning the machine on, all displays turn off.

Power consumption is reduced to an absolute minimum, while the safety functions remain activated.

Recommended for machines without an aquastop device (water intake hose with overflow protection)

- ▶ **Standby**
No function.
(Only for machines with payment systems)

Waking up machine

- ▶ Press button **On / Off** . porte s'ouvre automatiquement à la fin du programme.
-

Crease protection

- ▶ **Off**
- ▶ **30 min ***
- ▶ **6 h**

At the end of the programme a crease protection phase (loosening up of laundry) for 30 minutes or 6 hours can be set.


Automatic door opening

- ▶ **Off ***
- ▶ **On**

If this function is switched on, the door will open automatically at the end of the programme.

Default settings

The settings can be reset to default (state as delivered).

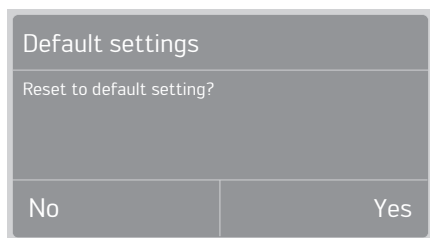

- ▶ Confirm the reset with **Yes**. All settings are reset to default.

Proficlean set

- ▶ **Proficlean (self-written programmes)**
- ▶ **Gastronomy**
- ▶ **Retirement homes**
- ▶ **Commercial ***
- ▶ **Facility cleaner**
- ▶ **Wellness center**
- ▶ **Camp site, laundries**
- ▶ **Hospitals, clinics**

Press the **Proficlean** button to display the menu of the programme group set here.

Cool down

- ▶ **Off ***
- ▶ **On**

Damage to older drains can be prevented by adding cold water to the boil wash cycle at the end of the washing process.

To prevent creasing, easy-care programmes are always cooled down, regardless of the selected setting here.

Reduced mains power

- ▶ **No ***
- ▶ **Yes**

If the connected load is reduced, the programme times will be extended accordingly.

No = 400 V 3 N ~ 4,6 kW / 10 AT

No = 400 V 2 N ~ 4,6 kW / 10 AT

Yes = 230 V 1 N ~ 2,3 kW / 10 AT

Yes = 230 V 1 N ~ 2,5 kW / 13 AT

Enable USB interface (option)

The USB interface must be activated for the transfer of separate, self-written wash programmes or liquid detergent parameters.

Cash-Card / Prepaid Card

(Option)

Selecting the programme

- Select the desired wash programme (see **Washing / Selecting and starting the programme**).

40° Easy care		0:50 h
800 U/min		max. 4.0 kg
Prewash		Price 1.90
Express		
Prewash	Time preset	

The selected programme will appear in the display together with duration, rpm, maximum load, selected options) and the according programme price.

Starting the programme

- Press button **START** and insert the user card.

The programme price will be deducted and the remaining credit will appear in the display.

User card	
Card balance	XX.XX
– Programm price	XX.XX
= New card balance	XX.XX
Remove card	

Once payment has been debited, the programme begins.

- Remove the user card.

Insufficient credit on card

If there is not enough credit on the user card to cover the programme price, the following message will appear in the display.

User card
Not enough balance Insert different user card

A second user card can be used to make up the balance.

Top up user card

User card
Card balance almost used up

When this message appears, credit needs to be topped up on the card before it can be used again.

Cleaning and maintenance

Hygiene function

The hygiene function ensures the washing machine remains clean even when using a low temperature programme.

Notice

The **hygiene function** can be activated via the Hygiene function setting.

If the temperature of the previous wash cycle was under 60 °C, the message «Autoclean 70 °C» will automatically appear in the display when you select another programme under 60 °C.

- ▶ You now have the choice to either switch to a 60 °C or 90 °C programme, or first run the hygiene programme to clean the machine.
- ▶ To begin washing without first running the hygiene programme, press **START**.

Hygiene programme

Select the **70° Autoclean** hygiene programme to clean the machine (see **Programme survey / Homecare / 70° Autoclean**).

Notice

Never place laundry in the machine or use laundry detergents when running the hygiene programme!

Cleaning the machine



Caution

Danger of electric shock!

- ▶ Switch off the power supply to the machine before cleaning.
 - ▶ Under no circumstances spray the machine with water.
 - ▶ Do not use a steam cleaner.
-

Notice

Solvents can damage parts of the machine, produce poisonous vapour and carry the risk of explosion. Do not use cleaning agents containing solvents.

- ▶ Do not use abrasive cleaning agents.
 - ▶ Never scratch or scrape with sharp objects.
 - ▶ Casings and control areas should only be cleaned with soap or a commercially available, solvent-free, non-abrasive cleaning product.
-

Notice

- ▶ Never use steel wool!
-

Cleaning the drum

- ▶ Rust marks caused by metal parts standing still for lengthy periods can be removed with a chlorine-free cleaning product (look at the description of the ingredients on the pack).

Descaling the machine

Lime scale formation depends largely on the hardness of the water. If the correct amounts of detergent are used, descaling is no longer necessary in general. If you do, however, wish to descale the machine, follow the manufacturer's instructions on the packet.

Notice

Descalers contain acids, can attack parts of the machine and cause discolouration of laundry.

Check water supply hose

To avoid water damage, we recommend having this checked by a specialist after around 5 years of fault-free operation.

Frost protection

If your washing machine is in a room susceptible to frost, all residual water must be removed from the detergent pump and the water supply and drain hoses immediately after use.

Emptying the water supply hose

Notice

Decrease the pressure in the inlet hose before unscrewing it:

- ▶ Turn the water tap off.
 - ▶ Select any programme, start it and end it again after approx. 40 seconds. As a result, the water pressure in the hose can be reduced.
-
- ▶ Switch off the power supply.
 - ▶ Screw off the supply hose at the tap.
 - ▶ Let the water run into a bowl.
 - ▶ Screw the hose back onto the tap.


Emptying the drain pump

See **Emergency emptying**.


Cleaning the detergent drawer


Removing the detergent drawer


The drawer can be pulled out completely by pressing lightly on the coloured tab in the middle compartment.

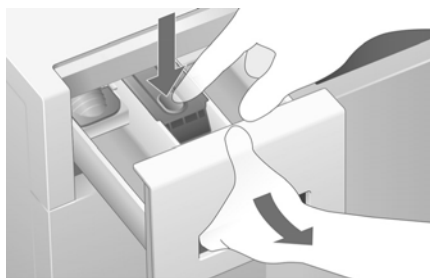


Cleaning the inside (weekly)

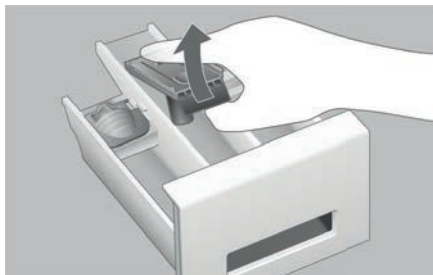


- ▶ Release the blue insert in **compartment**  by lightly lifting it up and take it out of the detergent drawer.

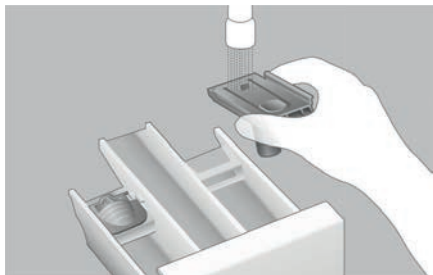

- ▶ Clean the insert and the detergent chambers under running water.

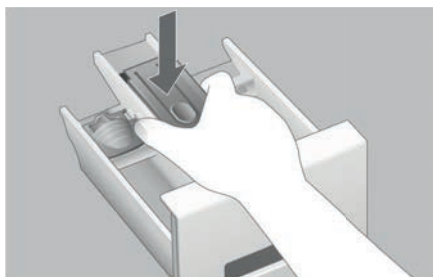

- ▶ Replace the insert into the middle compartment.

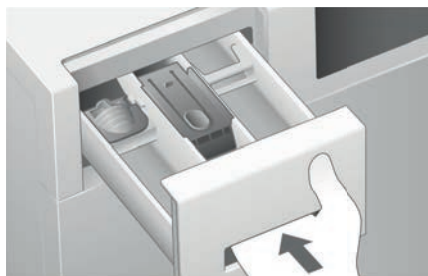

- ▶ Replace the detergent drawer in the machine.

Emergency emptying

Emergency emptying is necessary if:

- ▶ The error message **Check drain** appears.
- ▶ The pump is blocked by a foreign body (e.g. buttons, paper clip, fluff).
- ▶ The water cannot be pumped out.

Warning

Risk of injury!

- ▶ Switch off the power supply and turn off the water tap.



- ▶ Open the maintenance hatch at the machine front.




- Remove the flip cover from the machine and use it for catching the draining water.



Warning

Risk of scalding!!

When washing at high temperature the suds may be very hot. Let the suds cool down before draining!

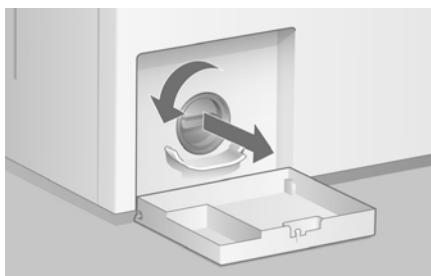


- Unscrew the pump cover stepwise until the water starts draining out.

Notice

Up to 20 litres of water can drain from the machine during emptying! Loosen the pump cover carefully and step by step.

- Once all the remaining water is drained, the pump cover can be unscrewed completely.
- Clean the pump interior. Remove foreign bodies and deposits of fluff. It must be possible to rotate the pump.
- Screw on the pump cover.

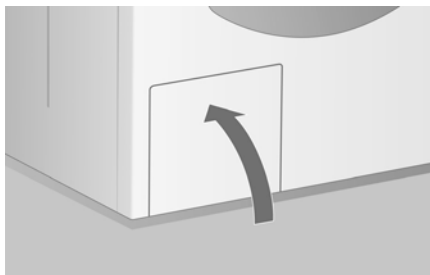

- Close the maintenance hatch.
- Switch the mains power back on.
- Select any washing programme and end it immediately as soon as the water inlet stops. This procedure prevents detergent from flowing unused into the drainage system at the next wash.

Cleaning the filters in the water inlet

The filters in the water inlet may get plugged.

Check and clean the filters if:

- ▶ The error message **Check water inlet** appears.
- ▶ Insufficient water flows into the appliance when the tap is turned on.

Notice


Decrease the pressure in the inlet hose before unscrewing it:

- ▶ Turn the water tap off.
- ▶ Select any programme, start it and end it again after approx. 40 seconds. As a result, the water pressure in the hose can be reduced.

-
- ▶ Switch off the power supply.
 - ▶ Screw off the supply hose at the tap.
 - ▶ Rinse out the filter under running water.



- ▶ Connect the hose again.
- ▶ Unscrew the other end of the hose from the back of the machine.

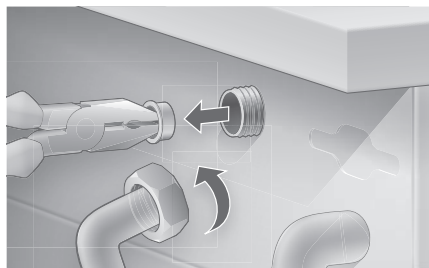

- ▶ Pull out the filter using a pair of long nose plier and rinse it out under running water.
- ▶ Reinsert the filter and connect the hose again.
- ▶ Briefly turn the water tap on and make sure that no water escapes.
- ▶ Turn the water tap off.

Problems




Warning

Improper repairs can result in severe accidents, damages and operation malfunctions!

Do not make any changes, manipulations or attempt repairs using tools such as screw-drivers, etc.

ERROR MESSAGES ON THE DISPLAY

Child lock active	<ul style="list-style-type: none">▶ Hold the bar in the upper right (is not lit!) and at the same time press the desired button.
Door open	<ul style="list-style-type: none">▶ Press the door until you hear the lock snap shut.▶ Press the start button to start the programme. <p>The door cannot be locked despite another attempt.</p> <ul style="list-style-type: none">▶ Press button Open the door .▶ Check whether a piece of laundry is stuck in the door.▶ Press the start button after you correct the malfunction.
Check water inlet	<ul style="list-style-type: none">▶ Open the water tap, and press the start button. <p>Filter in water supply is blocked.</p> <ul style="list-style-type: none">▶ Clean the filter (see Cleaning and maintenance / Cleaning the filters in the water inlet).▶ Press the start button after you correct the malfunction. <p>Interruption in water supply.</p>
Check drain	<ul style="list-style-type: none">▶ Check whether the drain hose is clogged.▶ Press the start button after you correct the malfunction. <p>Foreign bodies block the drain pump.</p> <ul style="list-style-type: none">▶ Clean the pump (see Cleaning and maintenance / Emergency emptying).▶ Press the start button after you correct the malfunction. <p>The water drain at the installation site is clogged.</p> <ul style="list-style-type: none">▶ Carry out an emergency emptying (see Cleaning and maintenance / Emergency emptying) and clean the drain siphon (built-in siphon).▶ Press the start button after you correct the malfunction.

	<ul style="list-style-type: none"> ▶ The position of the drain hose is too high. The maximum pumping height is 1 m above ground.
Insufficiently balanced	<p>The laundry could not be spun due to excessive unbalanced weight.</p> <ul style="list-style-type: none"> ▶ Press the light bar next to Continue to restart rinsing. <p>The laundry could not be spun despite pressing the light bar next to Continue.</p> <ul style="list-style-type: none"> ▶ Open the door and redistribute the load. ▶ Press the light bar next to Continue again. <p>The laundry could not be spun, even after loosening.</p> <ul style="list-style-type: none"> ▶ Press the light bar next to Cancel. The wash programme will be stopped. <p>Notice</p> <ul style="list-style-type: none"> ▶ Wash large and small laundry together. ▶ Avoid loading the drum with one single heavy item.
Too much foam Programme extended	<p>The washing machine has detected foam and taken adequate measures. The spinning cycle of the laundry could be completed.</p> <ul style="list-style-type: none"> ▶ In future, reduce the detergent quantity.
Too much foam Programme cancellation Check detergent dosing	<p>Due to extremely intensive foaming, the wash programme had to be aborted.</p> <ul style="list-style-type: none"> ▶ Repeat the wash programme without adding any detergent. ▶ In future, reduce the detergent quantity. ▶ If required use washing powder instead of liquid detergent.
Too much foam No disinfection Repeat programme	<p>Foaming was too strong.</p> <ul style="list-style-type: none"> ▶ The programme must be repeated using disinfectant.
Please wait, draining	<p>Too much water is in the washing machine. Water is pumped off.</p> <p>A lot of foam is visible in the door glass: Foaming is too intensive.</p> <ul style="list-style-type: none"> ▶ In future, reduce the detergent quantity.

Clean machine	<p>The washing machine will need to be cleaned soon.</p> <ul style="list-style-type: none"> ▶ Run the 70° Autoclean programme (see Homecare), without laundry or laundry detergents. ▶ To defer the cleaning function, select Cancel. You may now select and run a different programme. At the end of the programme, the Clean machine message will again appear in the display.
Clean machine now	<p>The washing machine needs to be cleaned immediately. No other programme can now be selected.</p> <ul style="list-style-type: none"> ▶ Run the 70° Autoclean programme (see Homecare»), without laundry or laundry detergents.
Power failure Programme extended	<p>Power failure (network failure) during washing. The programme has been extended.</p>
Power failure No disinfection Repeat programme	<p>Power failure (network failure) during washing. The programme has been terminated and must be repeated using disinfectant.</p>

ERROR MESSAGES CASH-CARD / PREPAID CARD

Turn card	<ul style="list-style-type: none"> ▶ Turn the card over.
Not enough balance Insert different user card	<p>There is not enough credit on the card.</p> <ul style="list-style-type: none"> ▶ Use a card which has credit.
Wrong user number or card type	<p>This card is not valid.</p> <ul style="list-style-type: none"> ▶ Please contact the person in charge.
Cannot read card	<p>This card cannot be read.</p> <ul style="list-style-type: none"> ▶ Try inserting the card again or contact the person in charge.
Wrong laundry room number	<p>This user card is not valid for this laundry room.</p>
This card could not be read.	<p>This card could not be read.</p> <ul style="list-style-type: none"> ▶ Please insert the card again.
Card balance almost used up	<p>The credit on this card is sufficient only for the programme you have selected.</p>

ERROR MESSAGES F --

«Error F --»
is displayed

- ▶ Acknowledge the error message with **OK**. Machine restarts.
- ▶ Press the door until you hear the lock snap shut.
- ▶ Select a programme again and press button **START**.


«Error F --»
is displayed again
despite programme re-
start

- ▶ Acknowledge the error message with **OK**.
- ▶ Interrupt the power supply for one minute (switch the main switch off and on again). As soon as the display lights, the appliance is again ready to operate.
- ▶ Press the door until you hear the lock snap shut.
- ▶ Select again a programme and press button **START**.

«Error F --» is
displayed again after
interruption of the
power supply

- ▶ Note the error message.
- ▶ Close the water tap and switch off the power supply.
- ▶ Contact customer service (see **Customer service**).

MACHINE OPERATION

Machine does not
start when pressing
the On / Off  button

- ▶ Check whether the mains power is switched on (wall / plug).
- ▶ Check whether all the fuses are intact or the safety switch has tripped.

Mains blockage (generally at noon).

- ▶ Operate the machine after the mains blockage has ended.
- ▶ If the machine does not start despite correct power supply, contact customer service.


The washing machine
does not start

- ▶ Press button **START**.
- ▶ If the programme does not start despite pressing the start button, contact customer services.

Notice

When time preset is activated, the programme starts only at the pre-selected time.

Loading door
cannot be opened

- Wait until the message **Programme end** is displayed.
- ▶ Press button **Open the door** .

Option **Rinsing stop** selected.

- ▶ To proceed further, see **Washing / Ending programme with rinsing stop**.

Defect appliance.

- ▶ Contact customer service (see **Customer service**).
-

Power outage.

- ▶ Open the loading door manually.
-


Open the loading door manually



Warning

Hot wash water!
Danger of burns!
Drain the machine
before manual
opening!

- ▶ Ensure that the drum stopped turning.
- ▶ Close the water tap.
- ▶ Switch off the power supply.
- ▶ Carry out an emergency emptying (see **Cleaning and Maintenance**).

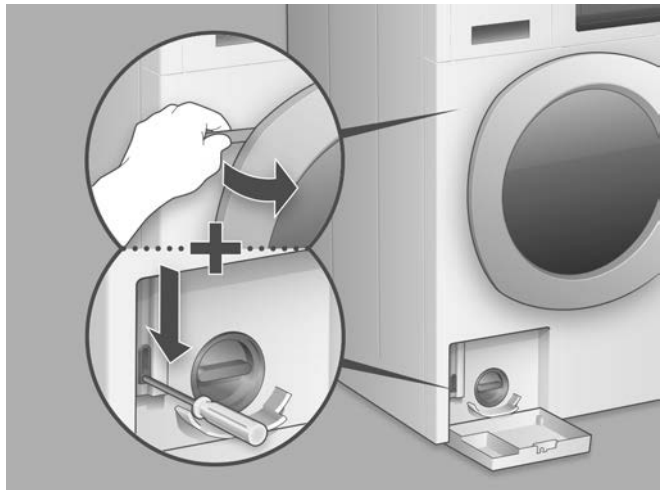

Unlock door and pull open

Perform the following operations simultaneously:

- ▶ Pull the black emergency opener with a screwdriver downwards and keep it pulled.
 - ▶ Lever open the door with the green tool or a narrow object at the same time (do not use metal!).
-

Notice

If the door is closed with the power off, it is locked again and the procedure must be repeated.

Drum lighting
does not work

The LED is defective.

- ▶ For safety reasons the LED must only be replaced by the customer service or a qualified specialist.
-


WASHING AND WASHING RESULT



Detergent residue in the detergent drawer

Damp or clumpy detergent

The blue lid **A** in **compartment II** is in the position for liquid detergents.

- ▶ Push the lid up and back.
- ▶ Dry the detergent drawer before adding detergent.
- ▶ Add the detergent to the dosing aid and put it in the drum with the laundry.

Viscous conditioner will remain in the conditioner **compartment** .

- ▶ Dilute the viscous conditioner with approx. 100 ml water and fill it in the conditioner **compartment** .
- ▶ Do not exceed the mark «max».
- ▶ Clean the conditioner **compartment**  (see **Cleaning and maintenance**).

Water not visible during wash

No error.

- ▶ The water is below the visible level in the machine.

Laundry does not get clean

Laundry was soiled more heavily than expected.

- ▶ Remove stains from the laundry before washing.
- ▶ Select the maximum permitted temperature for the fabric.
- ▶ Select a stronger wash programme.
- ▶ Dose detergent sufficiently (follow manufacturer's information).

Detergent residue on the washing

Detergent residues are not due to poor rinse performance of your washing machine. Insoluble residues found in a few phosphate-free detergents tend to be deposited as pale specks on laundry.

- ▶ Dry and brush off the detergent residue or repeat the whole rinse process immediately (see **Programme survey / Main menu programmes / Rinse, spin**).
- ▶ Use a wash programmes with a higher water level (easy care) and liquid detergent.
- ▶ Use additional rinse cycles.

Grey residue (soap scum) on the washing	<p>The normal amount of detergent is not always sufficient for soiling from ointments, fats or oils.</p> <ul style="list-style-type: none"> ▶ Increase the amount for the next wash. ▶ Select the maximum permitted temperature for the fabrics.
Grey stains on the washing	<p>Grey stains may be caused by cosmetics or fabric softener and may have appeared on the laundry outside the machine before washing.</p> <ul style="list-style-type: none"> ▶ Some stains can be washed out after soaking in liquid detergent.
The laundry is hard and / or like a board:	<ul style="list-style-type: none"> ▶ Use a conditioner for the next wash, if the laundry is dried in the air after washing. ▶ Dry the laundry in a tumble drier.
Drum and tank are dirty (scraps of paper, oil etc.)	<p>Tissues or similar objects have not been removed from the laundry before washing.</p> <ul style="list-style-type: none"> ▶ Clean drum and tank with the programme 70° Autoclean (see Homecare) (without laundry and detergent).
Laundry smells unpleasant (e.g. of sweat or rottenness)	<p>Laundry has been washed too long at only a low temperature and contains too many odour-producing germs.</p> <ul style="list-style-type: none"> ▶ Wash the laundry at 60 °C or the maximum permitted temperature for the textiles from time to time, and use heavy-duty detergent (with bleach). ▶ Use special low-temperature detergent when you wash at 20 / 30 °C.
Odour accumulation in the machine	<p>Odour-producing germs have accumulated in the washing machine or in the drain.</p> <ul style="list-style-type: none"> ▶ Run the maintenance programme 70° Autoclean (see Homecare) from time to time to clean the machine and drain (without laundry and detergent).
Laundry mats (pilling)	<p>Delicates such as wool can mat due to the high mechanical load.</p> <ul style="list-style-type: none"> ▶ Select a gentle, special programme suitable for delicates in the future.

Tear and hole formation, fibre wear of the laundry

It might be a case of normal wear or mechanical damage of textiles, which already existed before washing.

- ▶ Remove any foreign articles from the laundry before washing.
 - ▶ Close hooks, zips and Velcro closures before washing.
 - ▶ Wash sensitive laundry in a mesh bag.
-

FOAM AND LEAKAGE

Some foam can be seen at the programme end

Some detergents tend to produce more foam, which does not affect the rinse results.

Too much foam visible during washing
Foam fills the entire drum

Too much detergent was used.

- ▶ Mix approx. 20 ml conditioner and approx. ½ litre water.
 - ▶ Add the conditioner-water mixture into **compartment II** of the detergent drawer. Repeat procedure, if necessary.
 - ▶ Reduce detergent dose in the future.
-

Foam leaks from the detergent drawer during washing, rinsing or spinning

Too much detergent was used.

- ▶ Stop the programme by pressing button **Cancel**.
There are two possibilities to solve the problem:

Option A

- ▶ Stop the programme by pressing button **Cancel**.
 - ▶ Mix approx. 30 ml conditioner and approx. 1 litre water.
 - ▶ Start the previously selected wash programme (it may take several minutes until the machine is released for the selection of a new programme).
 - ▶ At the end of the water inlet, switch immediately forward to **Finishing rinse** by pressing **Forward**.
 - ▶ Add the conditioner-water mixture into **compartment I** of the detergent drawer.
The programme should now end as usually and the spinning process should take place.
 - ▶ Afterwards repeat the wash programme, however without any detergent.
-

Option B

- ▶ Wait for approx. 1 hour.
Then press button **START** and switch immediately forward to **Spin** by pressing **Forward**. Usually the laundry will be spun and the programme finishes as usual.
 - ▶ Repeat the wash programme, however without any detergent.
-
- ▶ Reduce detergent dose in the future.
 - ▶ If required use washing powder instead of liquid detergent.
-

Puddles and /or water stains form on the floor

- Too much detergent was used.
- ▶ Reduce detergent dose in the future.
 - ▶ Check whether the supply and drain hose connections are watertight and have been effected properly.
-

SPINNING AND NOISE

Pump noise

No error! Intake noise and «Emptying» noise by the detergent solution pump is normal.

Repeated spinning

The appliance detected an imbalance and is rectifying the imbalance by spinning repeatedly.

Poor spin result

The machine has detected an imbalance that it was unable to rectify.
If there are loads too low or critical laundry pieces, e.g., bathroom rugs, the laundry cannot be distributed sufficiently. In this case the spin speed is reduced in a targeted manner to protect the appliance from extensive stress.

**Vibrations during washing and spinning
«Machine movements» during spinning**

- The transport securing devices have not been removed.
- ▶ See the information in the Installation Instructions.
- Machine feet were not locked when installing the machine.
- ▶ Relevel the machine with a spirit level and securely lock the feet as prescribed in the Installation Instructions.
-

**Programme duration
extended**

No error.

- ▶ The machine has recognised foam and implemented remedy.
 - ▶ The machine has recognised imbalance and implemented remedy.
 - ▶ The machine has recognised excessive soiling and/or too turbid rinse water and has extended the programme.
-

Technical specifications

A-weighted continuous sound level

The measured continuous sound level is below 70 dB(A).

Customer service

Check whether you can correct the fault yourself before you call customer service (see chapter **Problems**).
If advice is required, costs may be incurred if a service technician is required, even during the guarantee period.
The guarantee does not cover faults caused by improper use and by blocked filters or foreign bodies.

If you cannot repair a malfunction yourself, disconnect the power supply (switch off the main switch / fuse at installation site/ turn off the tap) and call customer service.

Give customer services the error message F-- and the product and appliance number of your washing machine.
You will find this information on the type label inside the opened door.

<p>Product number</p> <hr/>
<p>Appliance number</p> <hr/>

Warranty

Warranty 1 year.

[illegible]

[illegible]

Headquarters and production






Schulthess Maschinen AG
Landstrasse 37, 8633 Wolfhausen ZH
Tel. + 41 (0) 55 253 51 11
www.schulthess.ch

Austria


Schulthess Maschinen GmbH
Hetzendorfer Strasse 191, 1130 Wien
Tel. + 43 (0) 1 803 98 00
www.schulthess.at

Brief instruction

Follow the safety instructions in this manual!

- ▶ Turn on the power switch and open the water tap.
- ▶ Press button **On / Off** .
- ▶ Press button **Open the door** .
- ▶ Select the programme and the programme options (go backwards or forwards with the **arrow buttons**  .
- ▶ Add laundry and close the loading door.
- ▶ Pull the detergent drawer out.
- ▶ Add detergent and close the detergent drawer until you feel it lock.
- ▶ Press button **START** .

At the end of the programme

- ▶ Press button **Open the door**  and remove the laundry.

At the end of the washday

- ▶ Clean the detergent drawer.
- ▶ Leave the door open.


WA14 E

The machine software uses FreeRTOS, version 7.6.0 (www.freertos.org) © Real Time Engineers Ltd.