

DAILY REFERENCE GUIDE

THANK YOU FOR PURCHASING A INDESIT PRODUCT



To receive more comprehensive help and support, please register your product at <http://www.indesit.com/register/indesit.html>

 


You can download the Safety Instructions and the Use and Care Guide by visiting our website www.indesit.eu and following the instructions on the back of this booklet.



Before using the appliance carefully read the Health and Safety guide.

PRODUCT DESCRIPTION

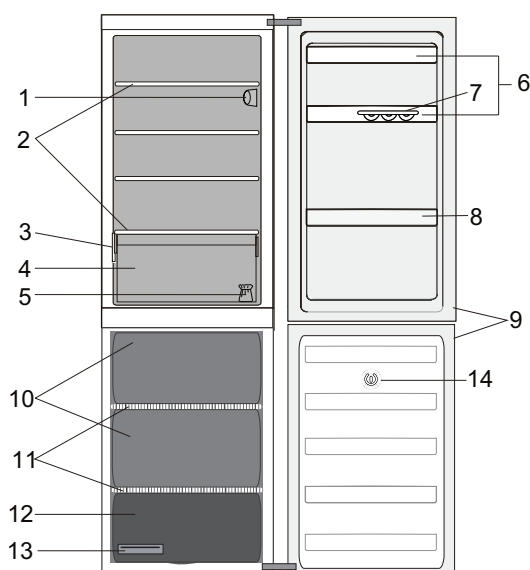

Refrigerator compartment

1. Electronic control panel / light unit
2. Shelves
3. Rating plate with commercial name
4. Fruits and vegetables crisper
5. Door reversibility kit
6. Door trays
7. Egg tray
8. Bottle balcony
9. Door seal

Freezer compartment

 
9. Door seals
10. Freezer drawers
11. Shelves
12. Bottom drawer: coolest zone best for freezing fresh food
13. Ice tray
14. Black Out Sensor

CONTROL PANEL

B. Thermostat Knob



- A. Light bulb
- B. Thermostat knob
- C. Thermostat seating indicator
- D. Light button

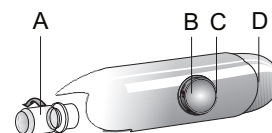


TEMPERATURE SETTING

Thermostat set to **MIN**: low cooling intensity
 Thermostat set between **MIN** and **MAX** : cooling intensity can be adjusted according to the preferences.
 Thermostat set to **MAX**: maximum refrigeration intensity.


For the best food conservation MED position is recommended.
Thermostat set to - : cooling and lighting off.
Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

ACCESSORIES

 EGG TRAY

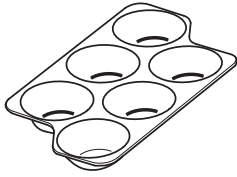

ICE TRAY

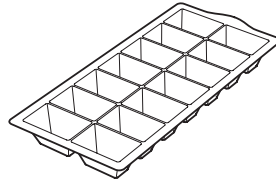 

FIRST TIME USE

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, turn the thermostat knob to switch on the appliance: cooling and light will switch on; set the knob on the desired power (see: "Control panel", at page1).

After starting the appliance, wait at least 4-6 hours before placing food into the fridge and into the freezer compartment.

REFRIGERATOR LIGHT

To remove the light bulb turn anticlockwise as shown in the picture:



Check the bulb. If necessary unscrew the broken bulb and replace it with a LED bulb of the same type available only at our After-sales Service Centers or authorized dealers.

The refrigerator compartment light switches on when the refrigerator door is opened.

SOME OF THE FUNCTIONAL SOUNDS YOU MIGHT HEAR

A hissing sound when switching on the appliance for the first time or after a long pause.



A gurgling sound when refrigerant fluid enters into the pipes.



BRRR sound is from the compressor running.



Buzzing sound when water valve or fan start working.



A cracking sound when compressor starts.

 


The CLICK is from the thermostat which adjusts how often the compressor is running.







BLACK OUT SENSOR

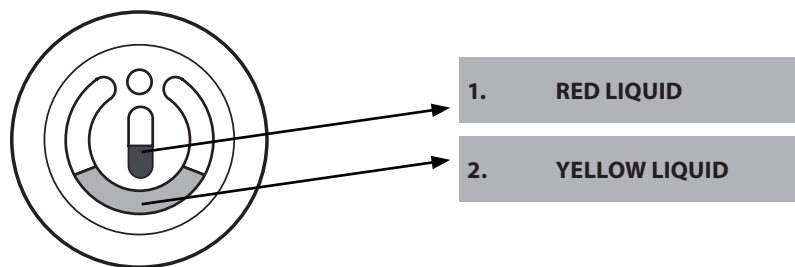 Through the two liquids contained, the black out sensor will give you indication in case blackout occurs.

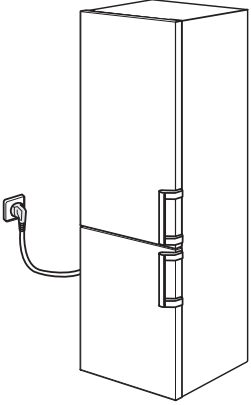

HOW TO USE (set up required at first use)


| | | | |
|---|--|--|---|
| <p>1</p> <p>Plug the fridge</p>  | <p>2</p> <p>The sensor must be in this position:</p>  | <p>3</p> <p>Wait 24 hours to make the liquid frozen</p> <p>+24h</p>  | <p>4</p> <p>24 hours later, you must rotate the blackout sensor of 180° clockwise. Now the sensor is ready to work. Check the sensor to inform if black out is occurred.</p>  |
|---|--|--|---|

CHECK THE SENSOR TO INFORM IF BLACK OUT IS OCCURRED

If one or both of the liquids are dissolved, this is an indication of increased temperature in the freezer that could be caused by a blackout. Even the partial melting of one of the 2 liquids can show an abnormal increase of the internal temperature.

| | | |
|---|--|--|
|  <p>Default configuration: No problem</p>  |  <p>YELLOW liquid fault down: food must be eaten in a week</p>  |  <p>RED + YELLOW liquid fault down: food should be thrown away</p>  |
|---|--|--|

 HOW TO STORE FOOD AND BEVERAGE

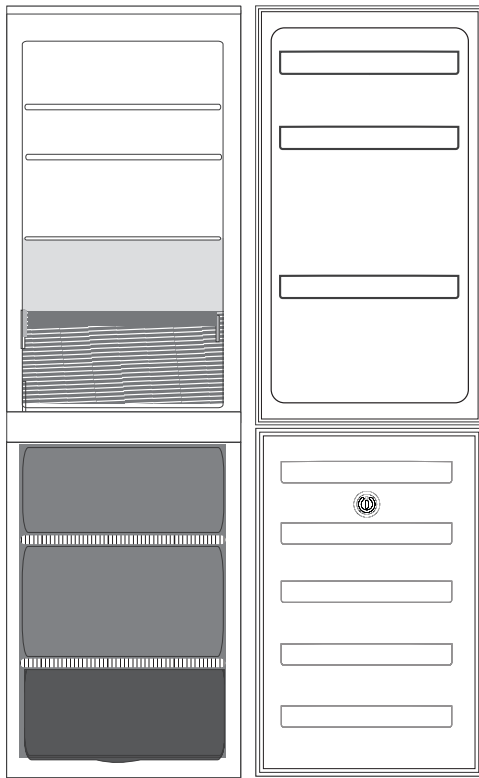

Legend



TEMPERATE ZONE

Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam



COOL ZONE

Suggested for storage of cheese, milk, daily food, delicatessen, yogurt, cold cuts, desserts



FRUIT & VEGETABLE DRAWER



NORMAL FREEZER DRAWERS



FREEZING ZONE DRAWER

(MAX COOL ZONE) Suggested to freeze fresh/cooked food.

Note: The Grey tone of the legend doesn't match with the color of drawers

FRIDGE COMPARTMENT

Use recyclable plastic, metal, aluminum and glass containers and cling film to wrap foods.

Always use closed containers for liquids and for food that may give off or be tainted by odor or flavor transfer or cover them.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment.

Foods which give off a large amount ethylene gas and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be separated or wrapped so as not to reduce the storage life; for example do not store tomatoes together with kiwi fruits or cabbage.

To avoid bottles falling over, you can use the bottle holder (available on selected models).

Do not store food too close together to enable sufficient air circulation.

FREEZER COMPARTMENT

The freezer is the ideal storage location for store frozen food, make ice cubes and freeze fresh food in the freezer compartment.

The maximum number of kilograms of fresh food that can be frozen within a 24-hour period is indicated on the rating plate (... kg/24h).

If you have a little quantity of food to store in the freezer, we recommend to use the coldest areas of your freezer compartment, corresponding to the bottom area.

PRODUCT FICHE

[www](http://www.indesit.eu) The product fiche with energy data of this appliance can be downloaded from Indesit Website www.indesit.eu

 
HOW TO OBTAIN THE USE AND CARE GUIDE

> [www](http://www.indesit.eu) Download the Use and Care Guide from our website www.indesit.eu (you can use this QR code), specifying the product's commercial code.
> Alternatively, contact our Client After-sales Service



CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

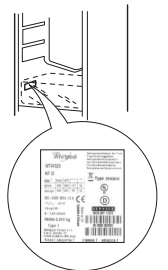

400010868582

Printed in Italy